



Sogevac[®] Neo D

NEO D 16

NEO D 25

NEO D 40

NEO D 65

Oil sealed rotary vane pump.

Original Instruction manual



P/N

970100V to 970103V

970200V to 970202V

970300V to 970302V

970400V to 970402V

And their variants.

Document Y26/300731504/002/C1

Contents

	Page
Important Safety Information	3
1 Description	6
1.1 Principle of operation	6
1.2 Technical characteristics	8
1.3 Ordering Information	21
1.4 Accessories	22
1.5 Spare parts	23
1.6 Lubricants	23
2 Transport and Storing	24
2.1 Transport and packaging	24
2.2 Mounting orientation	26
2.3 Storage	26
3 Installation	27
3.1 Installation	27
3.2 Connection to system	28
3.3 Electrical connections	29
3.4 Start-up	32
4 Operation	33
4.1 Operation	33
4.2 Shutdown	35
4.3 Ultimate pump pressure	35
4.4 Taking out of use	35
5 Maintenance	36
5.1 Safety Information	36
5.2 Maintenance Intervals	37
5.3 Service at Leybold facilities	37
5.4 Maintenance Work	39
6 Troubleshooting	44
7 Spare parts	46
EC Conformance Declaration	48
Declaration of Contamination of Compressors	49
Vacuum Pumps and Components	

Important Safety Information

Important Safety Information

Indicates procedures that must be strictly observed to prevent hazards to persons.

Indicates procedures that must be strictly observed to prevent damage to, or destruction of the product.

Emphasizes additional application information and other useful information provided within these Operating Instructions.

Warning

Caution

Note

The Leybold SOGEVAC® Neo D have been designed for safe and efficient operation when used properly and in accordance with these Operating Instructions. It is the responsibility of the user to carefully read and strictly observe all safety precautions described in this section and throughout the Operating Instructions. The SOGEVAC® Neo D **must only be operated in the proper condition and under the conditions described in the Operating Instructions.**

SOGEVAC® pumps are not designed:

- for pumping of aggressive, corrosive gases or gases mixtures ;
- for pumping of oxygen or other highly reactive gases with a greater concentration than atmospheric concentration (>20%) ;

For all these cases, special materials must be used. In case of doubt, please contact Leybold.

See also the limits of use indicated in the CE declaration of conformity.

Never expose part of the body to the vacuum. There is a danger of injury. Never operate the pump with an open and thus accessible inlet. Vacuum connections as well as oil filling and oil draining openings must not be opened during operation of the pump.

When operating pump is hot and some surfaces could reach a temperature higher than 80°C (176°F). There is a risk of burn by touching.

Depending on the process involved, dangerous substances and oil may escape from the pump. Take the necessary safety precautions !

When working on the pump system always observe the Operating Instructions.

Disconnect the unit from the power supply before starting any work.

Pump must not be operated above 2000 m sea level

High electric voltages! When touching parts at high electric voltages, there is the risk of suffering severe injuries by an electric shock! Covers marked with this symbol must only be opened by trained electricians after having reliably deenergised (lockout/tagout) the equipment.

Always operate the pump with a properly connected protective earth conductor and make sure that the motor & FC connection box are closed.

Use only the Leybold frequency converter for the pumps equipped with one.

Lay the connecting lines so that these cannot be damaged. Protect the lines against humidity and contact with fluids. Avoid thermally stressing the lines by unfavorable laying. Provide strain relief for the connecting lines so that the plugs and the line connectors are not subjected to excessively high mechanical stresses.

Lay electric feed lines so that there is no risk of tripping over these.

Warning



Caution



Important Safety Information

Take appropriate precautions to insure that the pump cannot start.

If the pump has pumped hazardous gases it will be absolutely necessary to determine the nature of the hazard involved and take the appropriate safety precautions.

Observe all safety regulations !

Take adequate safety precautions prior to opening the intake or exhaust port.

Failure to observe the following precautions could result in damage to the equipment!

Liquid and solid particles or dust must not enter into the pump. Install the adequate filters, separators and/or condensers. In case of doubt consult Leybold.

The intake line of the pump must never be connected to a device with over atmospheric pressure. Design the exhaust line so that no pressure higher than 1,15 bar abs. (0,15 bar rel.) can occur. The pressure regulation device is to be installed by the end-user. We recommend also to collect the pump exhaust and to treat the gases in function of their nature.

Operating of the pump without oil or operating with incorrect direction of rotation can destroy the pump.

Never use discarded seals. Always assemble using new seals.

Respect the instructions concerning environment protection when discarding used oil or exhaust filters !

The pump must be packaged in such a way that it will not be damaged during shipping, and so that no harmful substances can escape from the package.

We reserve the right to alter the design or any data given in these Operating Instructions. The illustrations are not binding.

It is mandatory that these operating instructions be read and understood prior to the vacuum pump installation and start-up.

We reserve the right to alter the design or any data given in these Operating Instructions. The illustrations are not binding.

Caution : hot surface ! In normal operation, the pump surface temperature can reach 85°C. There is a risk of burning. Switch off the pump and let it cool down before any intervention or take appropriate precautions. It is recommended to use an oil casing or pump touching protection at high ambient temperatures.

As a touching protection, you can use the "Noise enclosure for SV40 BI + 65 BI FC" P/N 960331NENC. The noise enclosure is an accessory not included in the pump delivery.

All work on a pump which is "still warm from operation" should be done only whilst wearing protective gloves.

Handle the pump only while vented and after having let it cool down.

Never remove the oil-fill or oil-drain plugs while the pump is running. There exists the risk of suffering burns. Always wear protective gloves and protec-

Warning



Caution

Note



tive goggles also for protection against the oil.

Some pumps use perfluoropolyether (PFPE) as lubricant.

When handling PFPE you should observe the following: During thermal decomposition at temperatures over 290 °C toxic and corrosive gases are released. This is not likely to happen in a Sogevac® pump. When handling PFPE keep it away from open fires. Do not smoke with PFPE on your fingers.

Touch the inner sections of the pumps only while wearing clean gloves, and use clean tools; do the necessary work in clean and dry rooms.

Do not allow the ingestion of any objects (screws, welding beads, nuts, washers, pieces of wire, fittings etc.) through the intake port of the pump.

Objects falling into the pump can cause severe damage.



Some variants are equipped with a frequency converter giving a constant pumping speed independently of the mains frequency and regulating the pump power consumption. At high inlet pressures, the pump speed is decreased.

The pump speed can be reduced to 1200 rpm (idle mode) to reduce the power consumption w/o loss of end pressure on some pump variants. In this idle mode, the pump inlet pressure must remain below 10 mbar

Information to user

The user's manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note : This equipment has been tested and found to comply with the limits for a Class B, group 1 digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

1. Description

SOGEVAC® pumps are designed for pumping of inert gases in the range of medium vacuum, between atmospheric pressure and end pressure of the pump. When removing condensable vapors, a gas ballast valve must be installed or opened.

1.1 Principle of operation

The SOGEVAC® Neo D are oil-sealed rotary vane pumps. The anti-suckback valve, gas ballast valve, exhaust filter, oil return circuit and oil cooling oil are integrated functional elements. The pumps are driven by a directly flanged motor.

The rotor mounted eccentrically in the pump cylinder has three vanes which divide the pump chamber into several compartments. The volume of each changes periodically with the rotation of the rotor. As the rotor rotates, the intake portion of the pumping chamber expands and sucks gas thru the intake port. The gas passes through the dirt trap and the open anti-suckback valve and enters the pump chamber. As the rotor rotates further, the vane separates part of the pump chamber from the intake port. This part of the pump chamber is reduced, and the gas is compressed. At slightly above atmospheric pressure the gas is expelled from the chamber via the exhaust valve.

Oil injected into the pump chamber serves to seal, lubricate and cool the pump. The oil entrained with the compressed gas is coarsely trapped in the oil case by deflection. Then fine filtering occurs in the exhaust filter elements. The proportion of oil in the exhaust gas is thus reduced below the visibility threshold (over 99 % entrapment rate).

Oil trapped in the exhaust filters is returned to the inlet chamber via an oil return line.

To prevent gas flowing at atmospheric pressure from the oil reservoir into the intake port, the oil return line is controlled by a float valve.

The oil cycle is maintained by the pressure difference existing between the oil casing (pressure above or equal atmospheric pressure) and the intake port (pressure below atmospheric pressure) and by an oil pump. On part of the oil is taken from the oil casing and flows via the oil filter to the bearing points of the rotor and to the pump chamber. The other part of oil injected in the pump does not run through the oil filter.

A fan running on the motor shaft generates the necessary cooling air.

Pumps depending of their P/N are equipped with a gas ballast device. If opened, a controlled amount of air so called "gas ballast" is admitted into the pump chamber. This gas ballast prevents condensation (up to the limit of water vapor tolerance specified in the Technical Data) when pumping condensable gases or vapors. There are different types of gas ballast :

- standard manual gas ballast closed, small flow & standard flow,
- EM 24 V DC gas ballast available upon request,
- permanent, available upon request,

Note

Description

Unintentional venting of the vacuum chamber as well as oil suck back when shutting down the pump are prevented by the integrated anti suck back valve. This valve is not a safety device and its correct operation & tightness can only be assured if the valve plate & sealing zone are kept clean and in good condition.

If all returns are to be avoided by all means, it is required to install a vacuum safety valve on the pump suction flange. Please consult us.

Warning



Description

1.2 Technical characteristics Sogevac NEO D 16

		NEO D 16	
		50 Hz	60 Hz
Nominal speed ¹⁾	m ³ . h ⁻¹ (cfm)	19 (11.2)	23 (13.5)
Pumping speed ¹⁾	m ³ . h ⁻¹ (cfm)	16 (9.4)	19 (11.2)
Ultimate partial pressure without gas ballast ¹⁾	mbar (Torr)	≤ 8 x 10 ⁻³ (≤ 6 x 10 ⁻³)	
Ultimate total pressure with standard gas ballast ¹⁾	mbar (Torr)	≤ 0.1 (≤ 0.075)	
Ambient temperature		12 ... 40 °C (54...104 °F)	
Water vapor tolerance with standard gas ballast ¹⁾	mbar (Torr)	10 (7.5)	10 (7.5)
Water vapor tolerance with standard gas ballast	kg.h ⁻¹ (qt/h)	0.03 (0.03)	0.04 (0.04)
Noise level ²⁾	dB (A)	54	55
Leak rate	mbar.l.s ⁻¹	≤1.10 ⁻³	≤1.10 ⁻³
Rated rotational speed	min. -1	1500	1800
Net weight (with oil filling)	kg (lbs)	49 (108)	
Oil capacity	l (qt)	1.5 (1.59)	
Intake connection		DN 25 ISO-KF	
Exhaust connection		DN 25 ISO-KF	

1) to DIN 28400 and following numbers, with standard gas ballast

2) operated at the ultimate pressure without gas ballast, free-field measurement at a distance of 1 m

Conversion factors	Different pressure units			Different pumping speed units			
	mbar (millibar)	torr	inches Hg vacuum		m ³ .h ⁻¹	l.s ⁻¹	cfm
1lb = 0.453 kg	1013	760	0	m ³ . h ⁻¹ = m ³ /h	1	0.278	0.589
1 qt = 0.946 l	400	300	18.12				
1 hp = 0.735 kW	133	100	25.98	l.s ⁻¹ = l/s	3.60	1	2.12
1 r.p.m. = 1 min ⁻¹	4	3	29.80				
1 inch = 25.4 mm	1	0.75	29.89	cfm (cubic feet per minute)	1.699	0.472	1
	0,1	0.75	29.92				
1 atm (atmosphere) = 1013 mbar				Example : 1 m ³ .H ⁻¹ = 0.589 cfm			
1 Pa (pascal) = 0.01 mbar = 10 ⁻² mbar				Note : The nominal pumping speed of			
1 bar = 1000 mbar				a pump at 60 Hz is 20% higher than at 50 Hz			
1 torr = 1.33 mbar							

These values are valid for the standard variants and with the use of the recommended oils acc. § 1.6.

Description

1.2 Technical characteristics Sogevac NEO D 25

		NEO D 25	
		50 Hz	60 Hz
Nominal speed ¹⁾	m ³ . h ⁻¹ (cfm)	28	34
Pumping speed ¹⁾	m ³ . h ⁻¹ (cfm)	24	29
Ultimate partial pressure without gas ballast ¹⁾	mbar (Torr)	≤ 8 x 10 ⁻³ (≤ 6 x 10 ⁻³)	
Ultimate total pressure with standard gas ballast ¹⁾	mbar (Torr)	≤ 0.1 (≤ 0.075)	
Ambient temperature		12 ... 40 °C (54...104 °F)	
Water vapor tolerance with standard gas ballast ¹⁾	mbar (Torr)	10 (7.5)	10 (7.5)
Water vapor tolerance with standard gas ballast	kg.h ⁻¹ (qt/h)	0.05 (0.05)	0.06 (0.06)
Noise level ²⁾	dB (A)	54	55
Leak rate	mbar.l.s ⁻¹	≤1.10 ⁻³	≤1.10 ⁻³
Rated rotational speed	min. -1	1500	1800
Net weight (with oil filling)	kg (lbs)	50 (110)	
Oil capacity	l (qt)	1.5 (1.59)	
Intake connection		DN 25 ISO-KF	
Exhaust connection		DN 25 ISO-KF	

1) to DIN 28400 and following numbers, with standard gas ballast

2) operated at the ultimate pressure without gas ballast, free-field measurement at a distance of 1 m

Conversion factors	Different pressure units			Different pumping speed units		
	mbar (millibar)	torr	inches Hg vacuum	m ³ .h ⁻¹	l.s ⁻¹	cfm
1 lb = 0.453 kg	1013	760	0	m ³ . h ⁻¹ = m ³ /h	1	0.589
1 qt = 0.946 l	400	300	18.12			
1 hp = 0.735 kW	133	100	25.98	l.s ⁻¹ = l/s	3.60	2.12
1 r.p.m. = 1 min ⁻¹	4	3	29.80			
1 inch = 25.4 mm	1	0.75	29.89	cfm (cubic feet per minute)	1.699	0.472
	0,1	0.75	29.92			1

1 atm (atmosphere) = 1013 mbar
 1 Pa (pascal) = 0.01 mbar = 10⁻² mbar
 1 bar = 1000 mbar
 1 torr = 1.33 mbar

Example : 1 m³.H⁻¹ = 0.589 cfm
 Note : The nominal pumping speed of a pump at 60 Hz is 20% higher than at 50 Hz

These values are valid for the standard variants and with the use of the recommended oils acc. § 1.6.

Description

1.2 Technical characteristics Sogevac NEO D 40

		NEO D 40	
		50 Hz	60 Hz
Nominal speed ¹⁾	m ³ . h ⁻¹ (cfm)	47	56
Pumping speed ¹⁾	m ³ . h ⁻¹ (cfm)	40	48
Ultimate partial pressure without gas ballast ¹⁾	mbar (Torr)	≤ 8 x 10 ⁻³ (≤ 6 x 10 ⁻³)	
Ultimate total pressure with standard gas ballast ¹⁾	mbar (Torr)	≤ 0.1 (≤ 0.075)	
Ambient temperature		12 ... 40 °C (54...104 °F)	
Water vapor tolerance with standard gas ballast ¹⁾	mbar (Torr)	10 (7.5)	10 (7.5)
Water vapor tolerance with standard gas ballast	kg.h ⁻¹ (qt/h)	0.28 (0.30)	0.34 (0.36)
Noise level ²⁾	dB (A)	57	58
Leak rate	mbar.l.s ⁻¹	≤1.10 ⁻³	≤1.10 ⁻³
Rated rotational speed	min. -1	1500	1800
Net weight (with oil filling)	kg (lbs)	80 (176)	
Oil capacity	l (qt)	3 (3.2)	
Intake connection		DN 40 ISO-KF	
Exhaust connection		DN 40 ISO-KF	

1) to DIN 28400 and following numbers, with standard gas ballast

2) operated at the ultimate pressure without gas ballast, free-field measurement at a distance of 1 m

Conversion factors	Different pressure units			Different pumping speed units		
	mbar (millibar)	torr	inches Hg vacuum	m ³ .h ⁻¹	l.s ⁻¹	cfm
1 lb = 0.453 kg	1013	760	0	m ³ . h ⁻¹ = m ³ /h	1	0.589
1 qt = 0.946 l	400	300	18.12			
1 hp = 0.735 kW	133	100	25.98	l.s ⁻¹ = l/s	3.60	2.12
1 r.p.m. = 1 min ⁻¹	4	3	29.80			
1 inch = 25.4 mm	1	0.75	29.89	cfm (cubic feet per minute)	1.699	0.472
	0,1	0.75	29.92			1
1 atm (atmosphere) = 1013 mbar				Example : 1 m ³ .H ⁻¹ = 0.589 cfm		
1 Pa (pascal) = 0.01 mbar = 10 ⁻² mbar				Note : The nominal pumping speed of		
1 bar = 1000 mbar				a pump at 60 Hz is 20% higher than at 50 Hz		
1 torr = 1.33 mbar						

These values are valid for the standard variants and with the use of the recommended oils acc. § 1.6.

Description

1.2 Technical characteristics Sogevac NEO D 65

		NEO D 65	
		50 Hz	60 Hz
Nominal speed ¹⁾	m ³ . h ⁻¹ (cfm)	74	89
Pumping speed ¹⁾	m ³ . h ⁻¹ (cfm)	63	76
Ultimate partial pressure without gas ballast ¹⁾	mbar (Torr)	≤ 8 x 10 ⁻³ (≤ 6 x 10 ⁻³)	
Ultimate total pressure with standard gas ballast ¹⁾	mbar (Torr)	≤ 0.1 (≤ 0.075)	
Ambient temperature		12 ... 40 °C (54...104 °F)	
Water vapor tolerance with standard gas ballast ¹⁾	mbar (Torr)	10 (7.5)	10 (7.5)
Water vapor tolerance with standard gas ballast	kg.h ⁻¹ (qt/h)	0.36 (0.38)	0.42 (0.44)
Noise level ²⁾	dB (A)	57	58
Leak rate	mbar.l.s ⁻¹	≤1.10 ⁻³	≤1.10 ⁻³
Rated rotational speed	min. -1	1500	1800
Net weight (with oil filling)	kg (lbs)	96 (212)	
Oil capacity	l (qt)	3 (3.2)	
Intake connection		DN 40 ISO-KF	
Exhaust connection		DN 40 ISO-KF	

1) to DIN 28400 and following numbers, with standard gas ballast

2) operated at the ultimate pressure without gas ballast, free-field measurement at a distance of 1 m

Conversion factors	Different pressure units			Different pumping speed units		
	mbar (millibar)	torr	inches Hg vacuum	m ³ .h ⁻¹	l.s ⁻¹	cfm
1 lb = 0.453 kg	1013	760	0	m ³ . h ⁻¹ = m ³ /h	1	0.589
1 qt = 0.946 l	400	300	18.12			
1 hp = 0.735 kW	133	100	25.98	l.s ⁻¹ = l/s	3.60	2.12
1 r.p.m. = 1 min ⁻¹	4	3	29.80			
1 inch = 25.4 mm	1	0.75	29.89	cfm (cubic feet per minute)	1.699	0.472
	0,1	0.75	29.92			1

1 atm (atmosphere) = 1013 mbar
 1 Pa (pascal) = 0.01 mbar = 10⁻² mbar
 1 bar = 1000 mbar
 1 torr = 1.33 mbar

Example : 1 m³.H⁻¹ = 0.589 cfm
 Note : The nominal pumping speed of
 a pump at 60 Hz is 20% higher than at 50 Hz

These values are valid for the standard variants and with the use of the recommended oils acc. § 1.6.

Description

Dimensional drawing NEO D 16


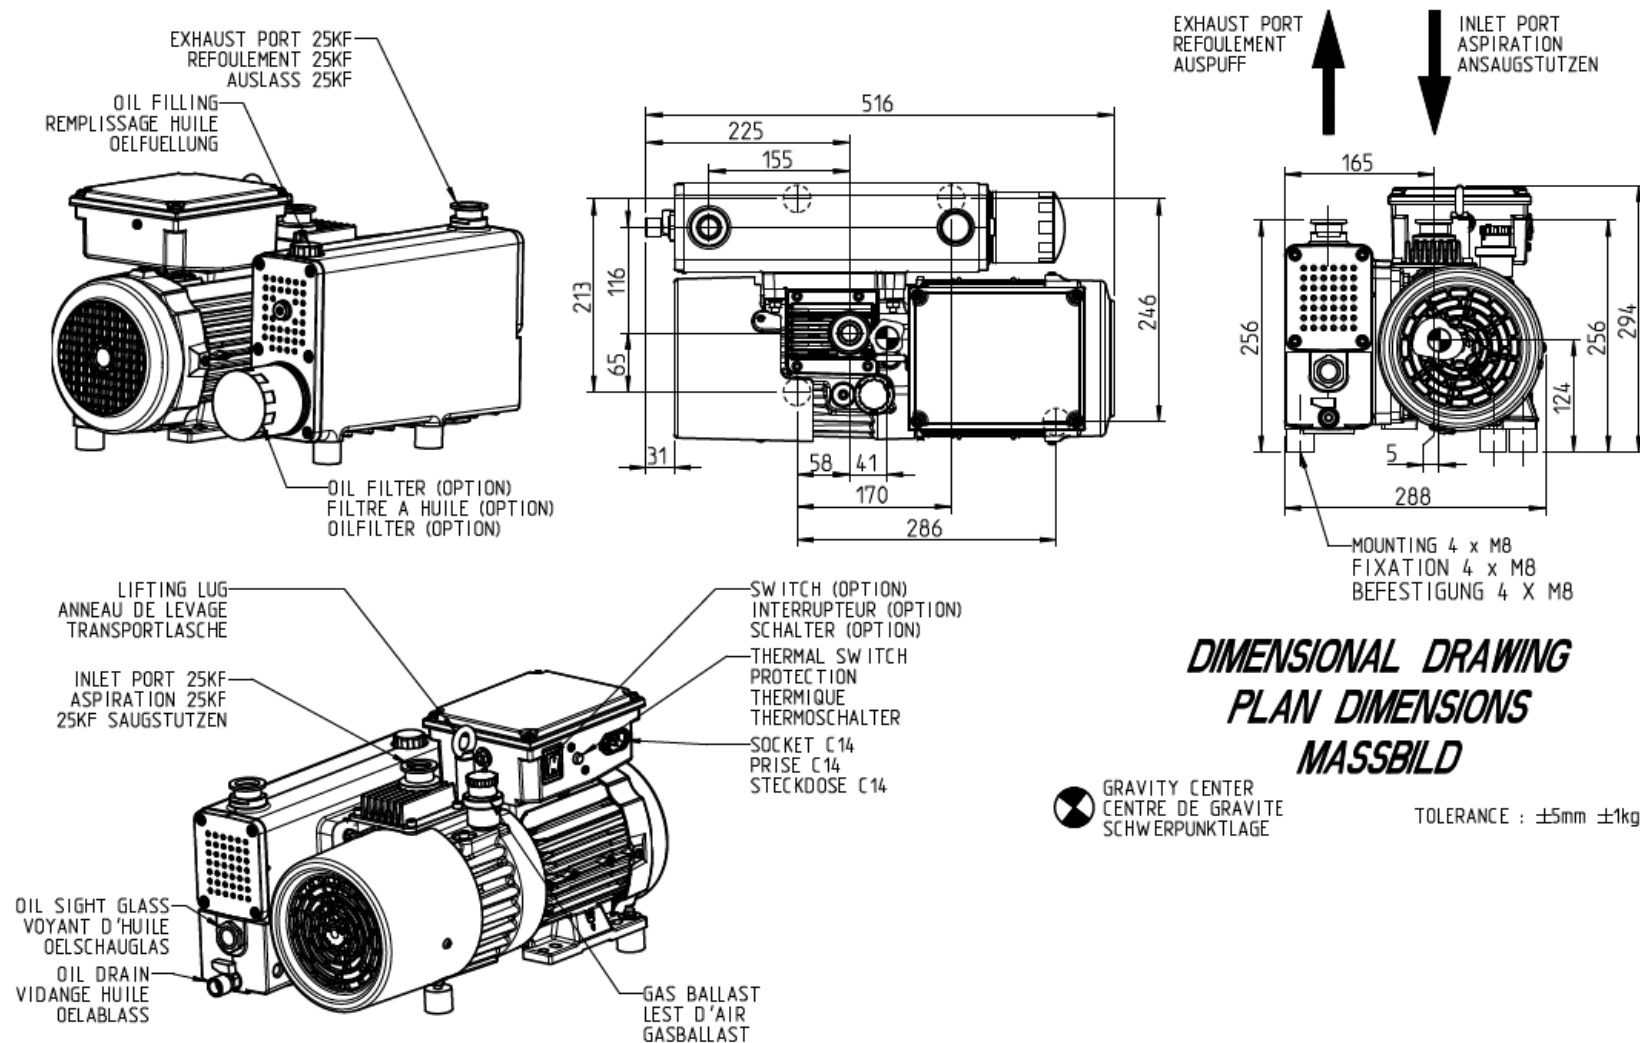


Fig 1.1

Description

Dimensional drawing NEO D 25

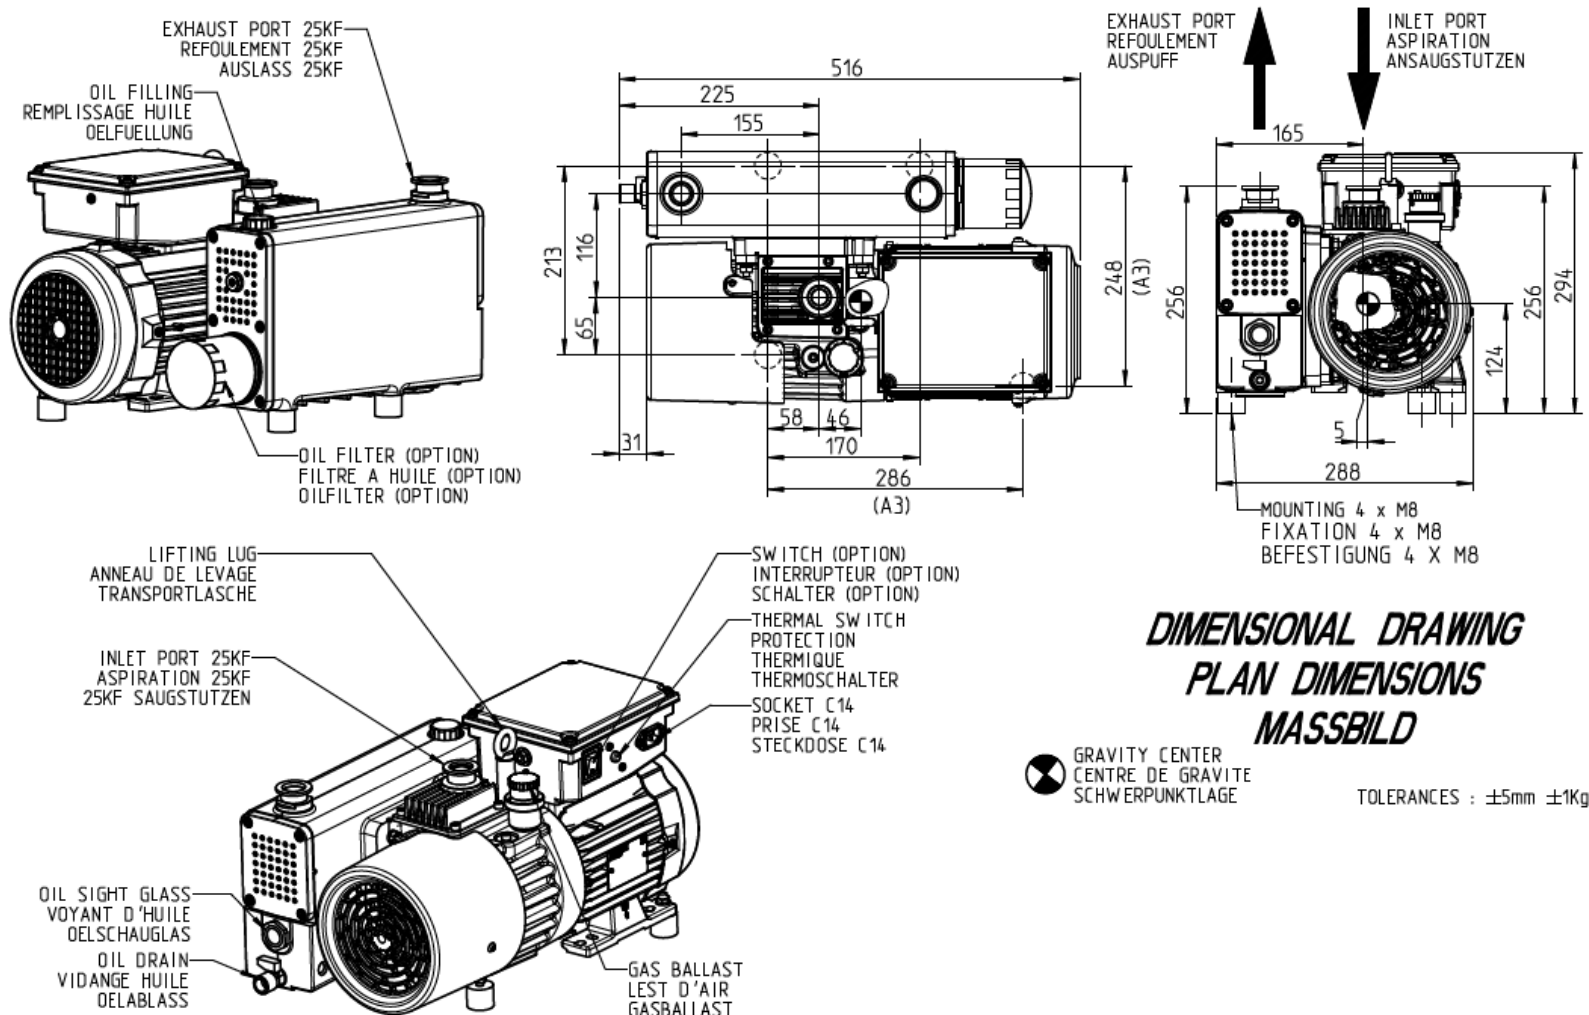

DIMENSIONAL DRAWING PLAN DIMENSIONS MASSBILD

Fig 1.2

Description

Installation drawing NEO D 16 & 25

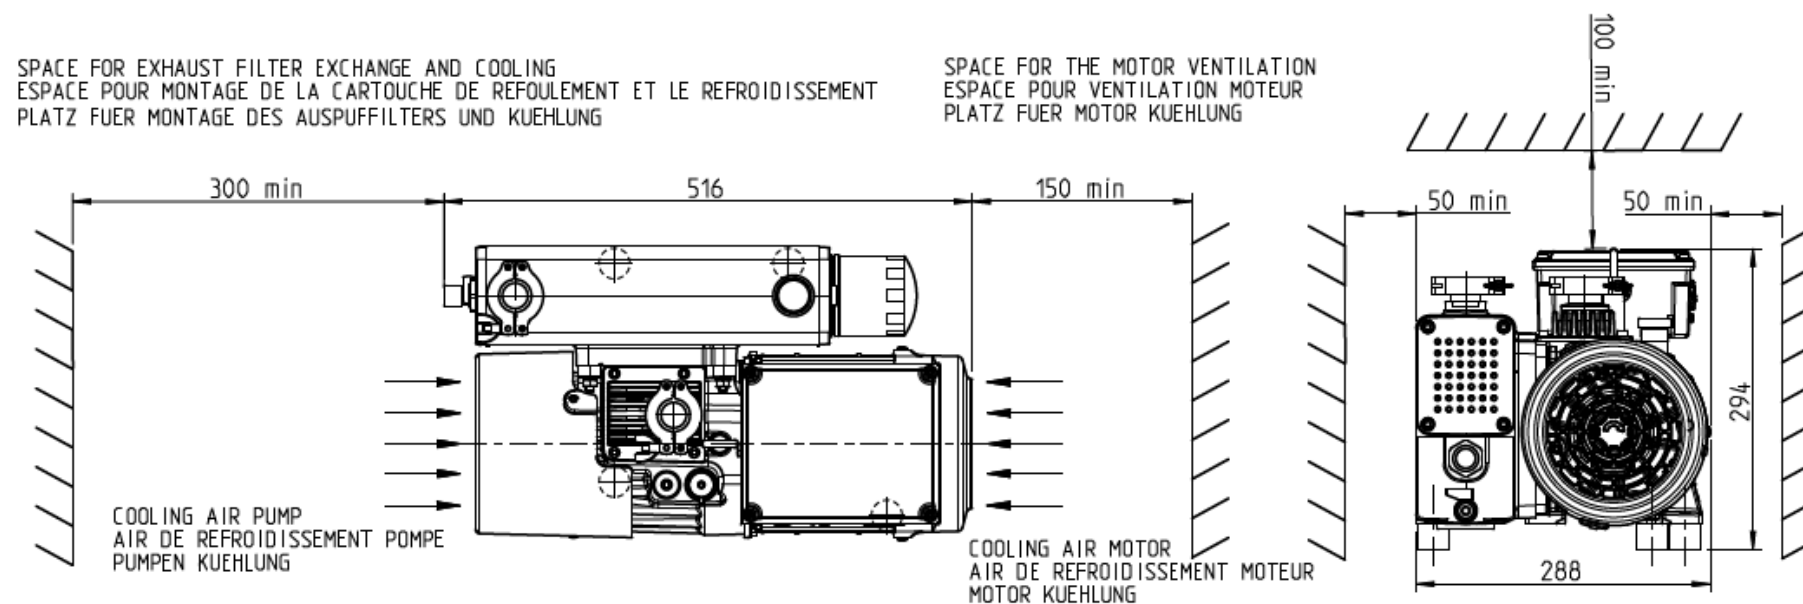


Fig 1.3

Dimensional drawing NEO D 40

Description

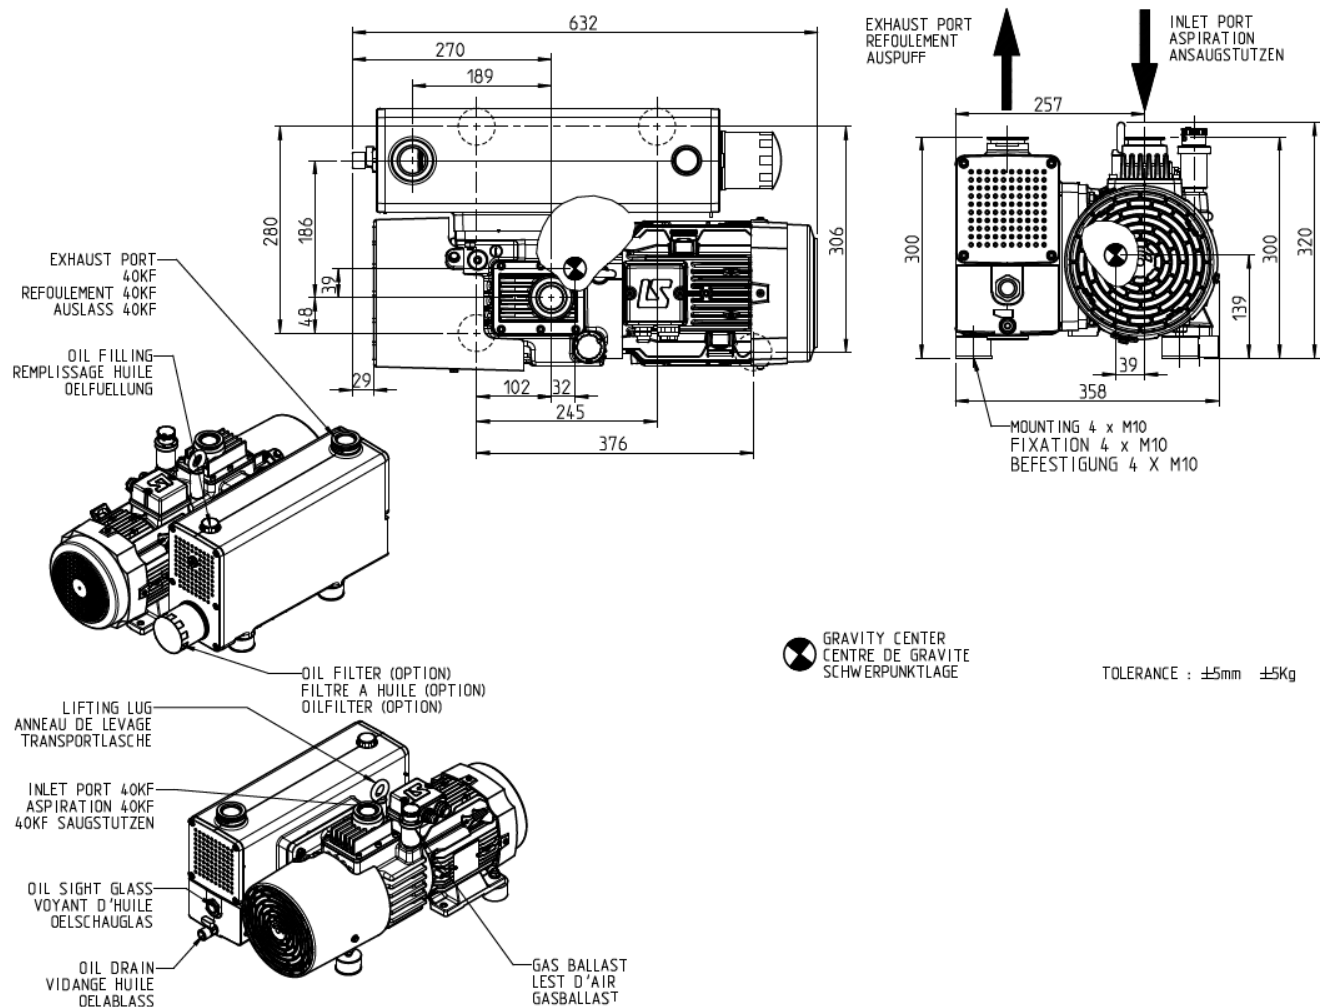


Fig 1.4

Dimensional drawing NEO D 65

Description


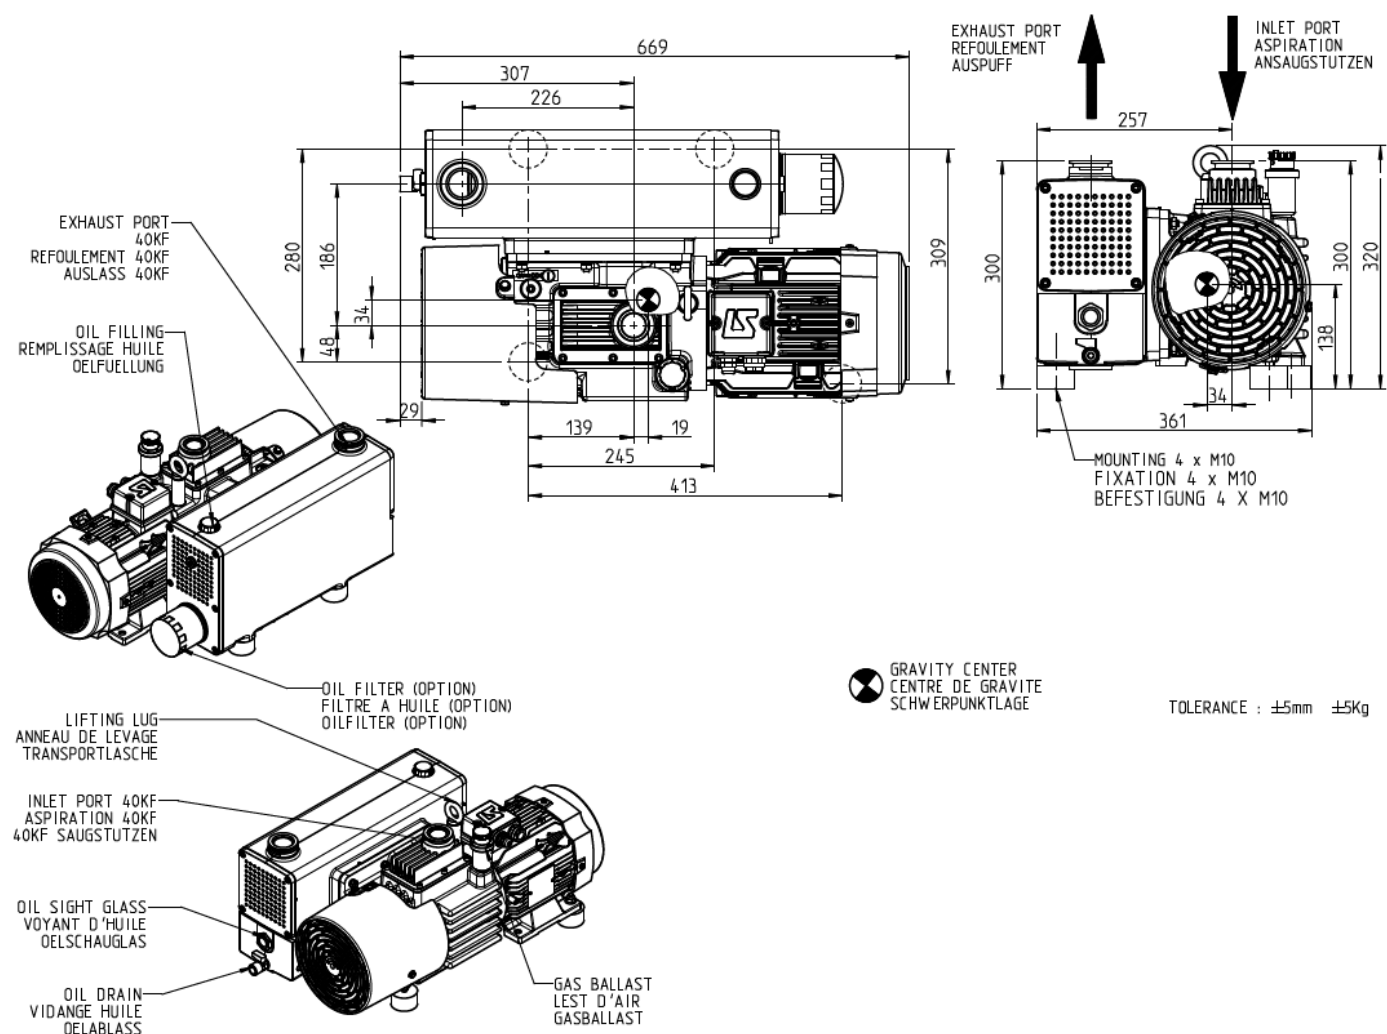


Fig 1.5

Installation drawing NEO D 40


SPACE FOR EXHAUST FILTER EXCHANGE AND COOLING
ESPACE POUR MONTAGE DE LA CARTOUCHE DE REFOULEMENT ET LE REFROIDISSEMENT
PLATZ FUER MONTAGE DES AUSPUFF-FILTERS UND KUEHLUNG

SPACE FOR THE MOTOR VENTILATION
ESPACE POUR VENTILATION MOTEUR
PLATZ FUER MOTOR KUEHLUNG

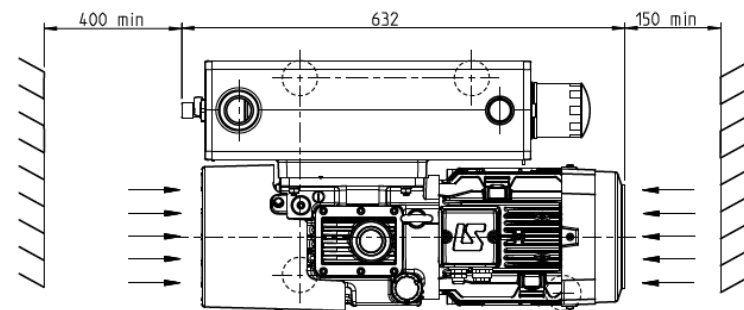

COOLING AIR PUMP
AIR DE REFROIDISSEMENT POMPE
PUMPEN KUEHLUNG


COOLING AIR MOTOR
AIR DE REFROIDISSEMENT MOTEUR
MOTOR KUEHLUNG

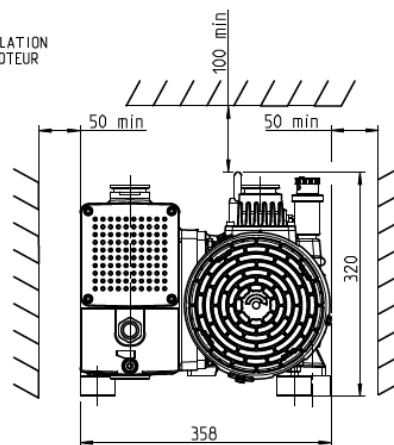

Installation drawing NEO D 65

SPACE FOR EXHAUST FILTER EXCHANGE AND COOLING
ESPACE POUR MONTAGE DE LA CARTOUCHE DE REFOULEMENT ET LE REFROIDISSEMENT
PLATZ FUER MONTAGE DES AUSPUFF-FILTERS UND KUEHLUNG

SPACE FOR THE MOTOR VENTILATION
ESPACE POUR VENTILATION MOTEUR
PLATZ FUER MOTOR KUEHLUNG

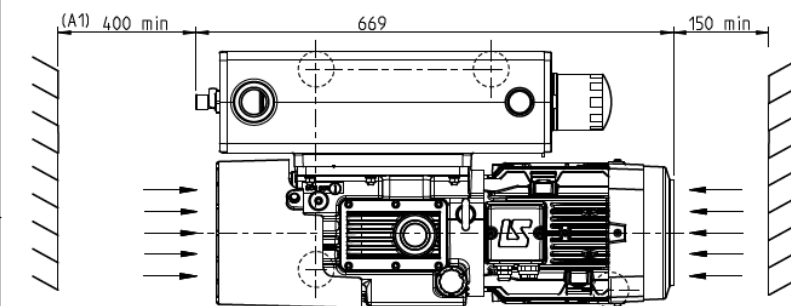

COOLING AIR PUMP
AIR DE REFROIDISSEMENT POMPE
PUMPEN KUEHLUNG

COOLING AIR MOTOR
AIR DE REFROIDISSEMENT MOTEUR
MOTOR KUEHLUNG



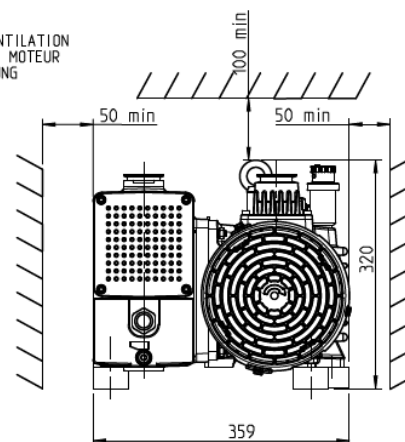


Fig 1.6


NEO D 16 Pumping speed curve 50 Hz

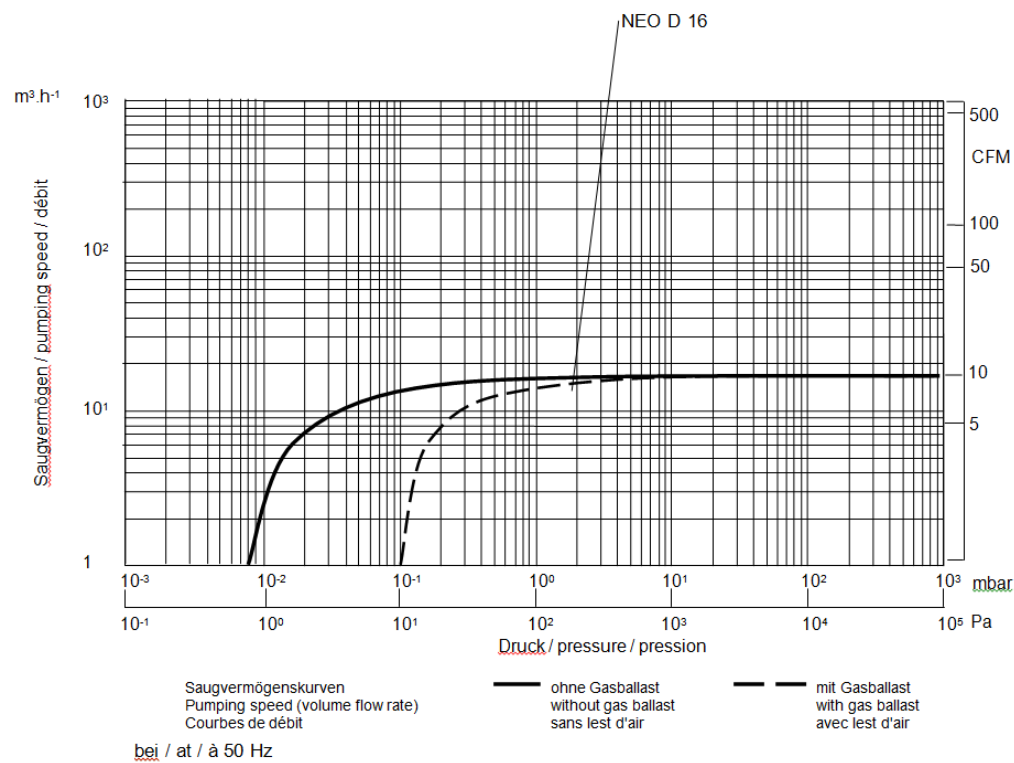


NEO D 16 Pumping speed curve 60 Hz

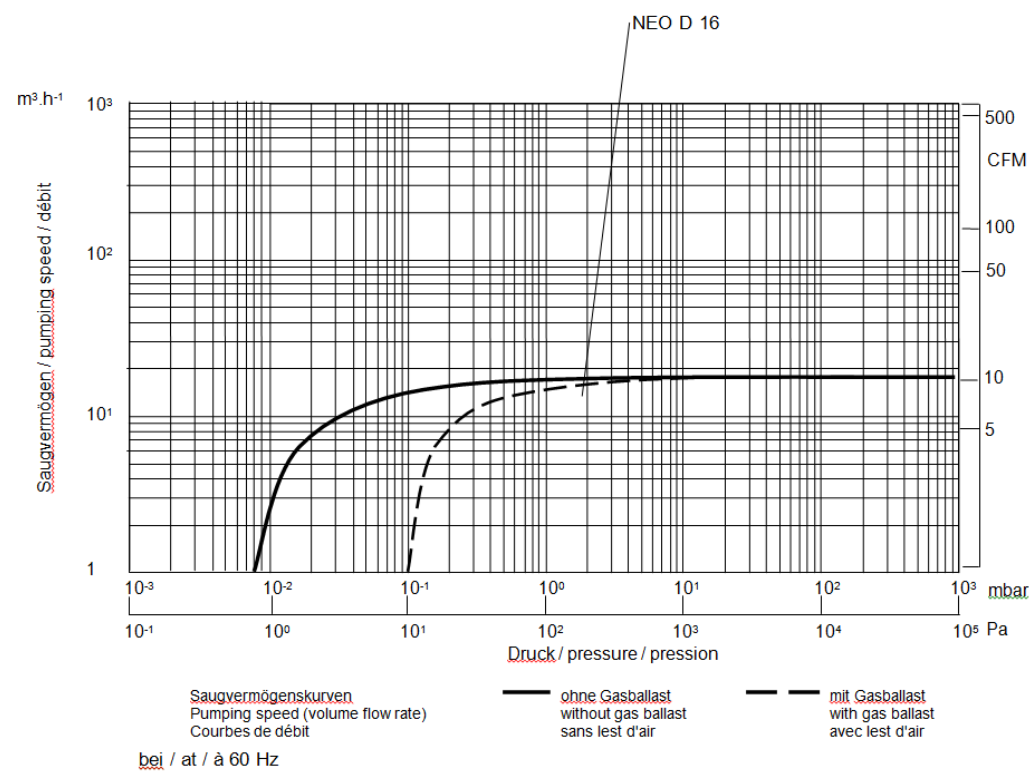


NEO D 25 Pumping speed curve 50 Hz

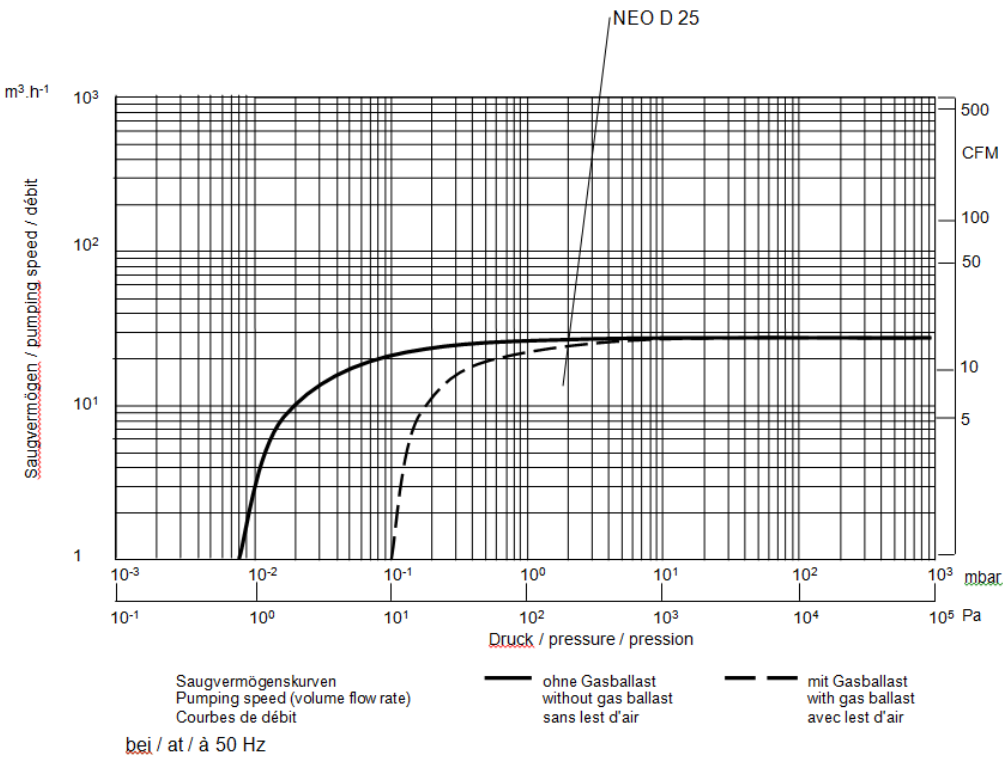


NEO D 25 Pumping speed curve 60 Hz

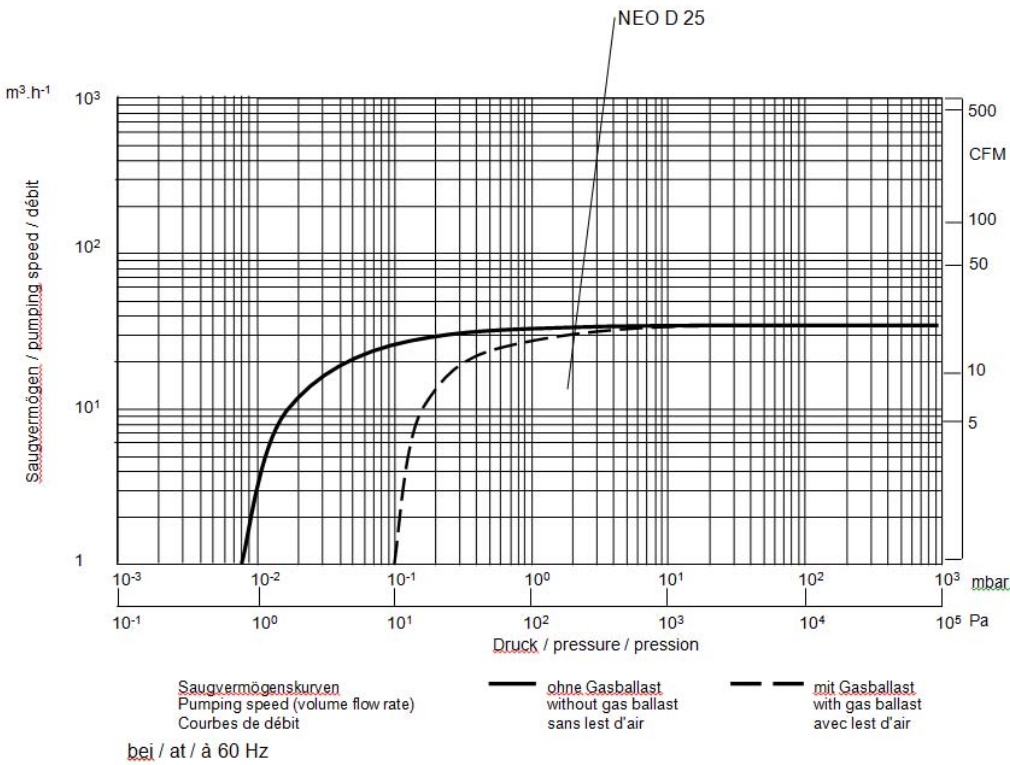


NEO D 40 Pumping speed curve 50 Hz

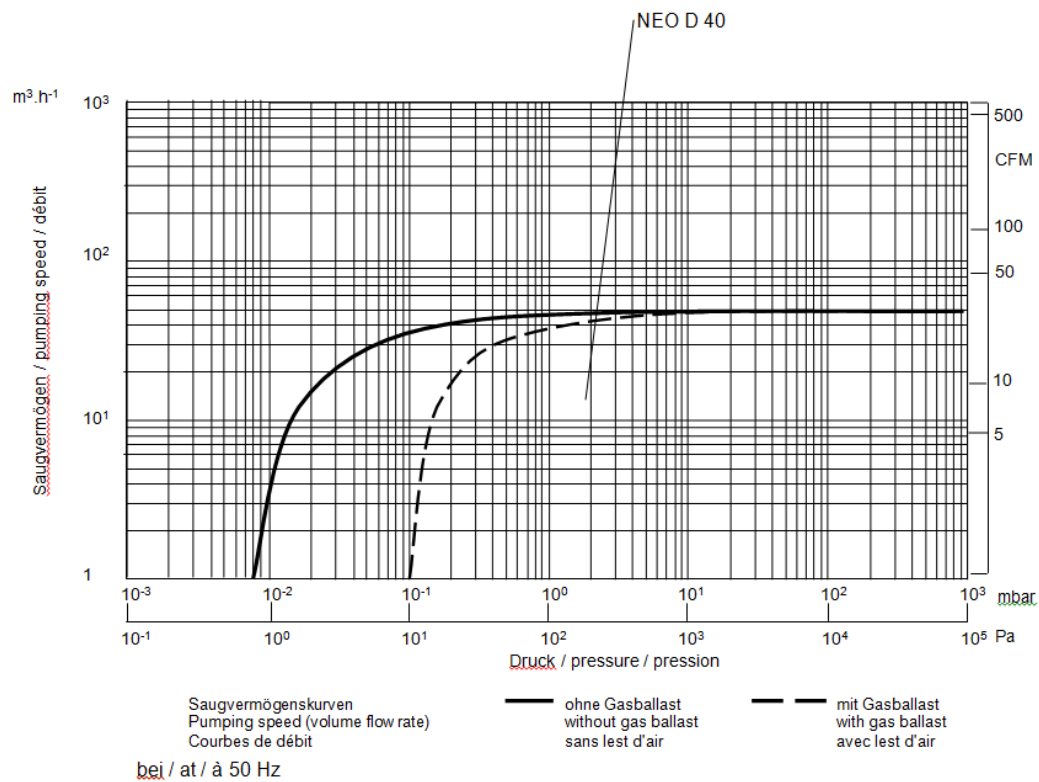


NEO D 40 Pumping speed curve 60 Hz

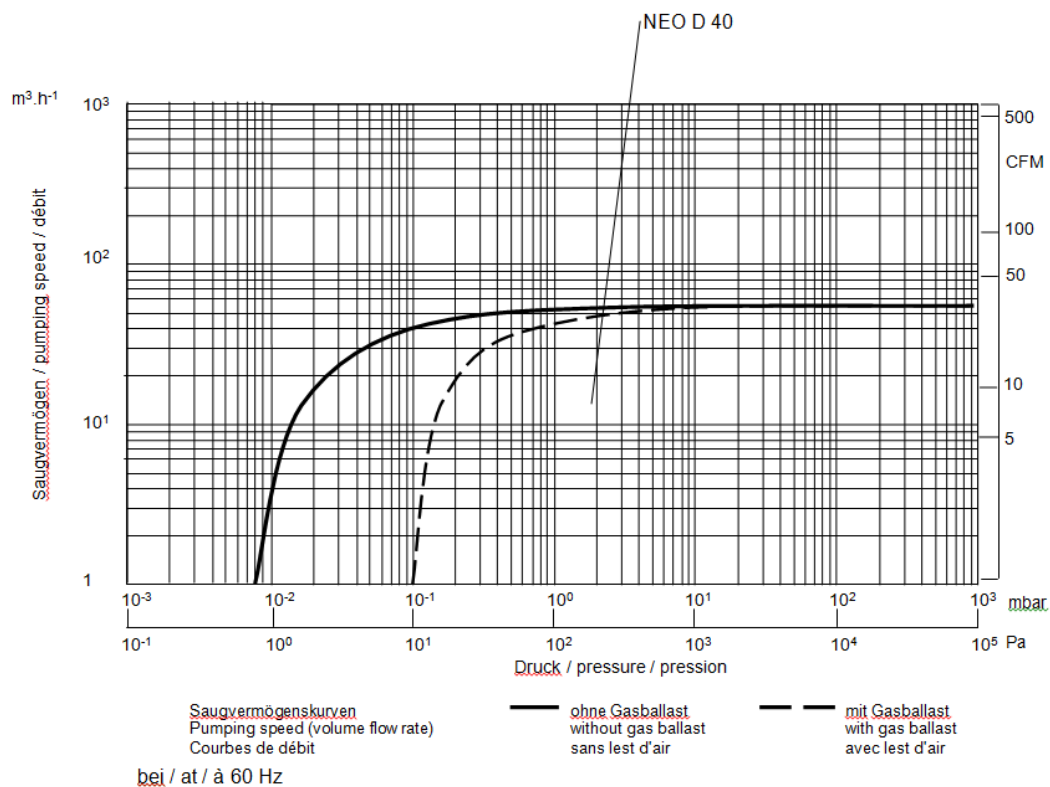

NEO D 65 Pumping speed curve 50 Hz

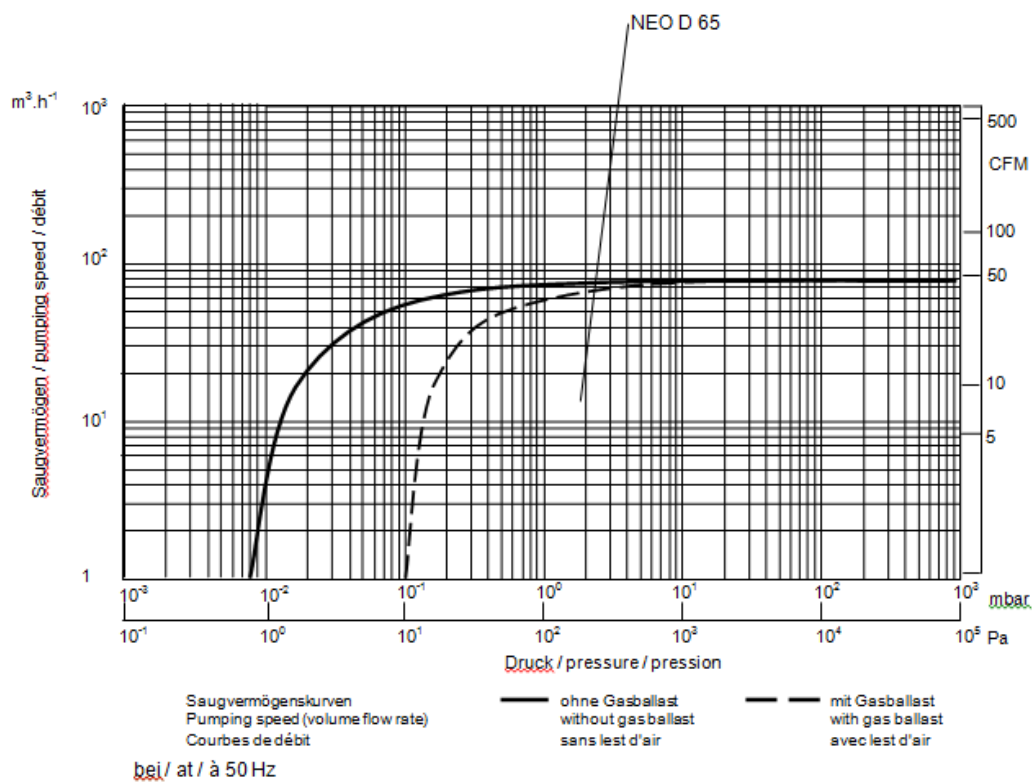

NEO D 65 Pumping speed curve 60 Hz

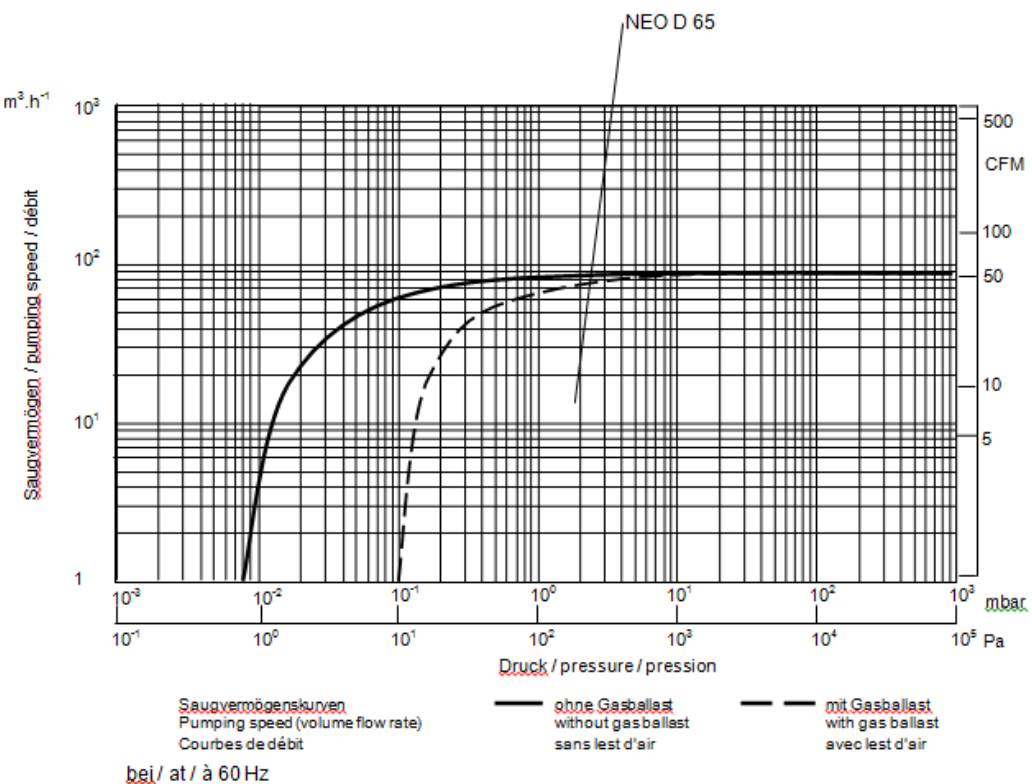

Description

1.3 Ordering Information

P/N	Pump Pompe Pumpe	Motor	GB	Oil filter Filtre huile Ölfilter	Oil Huile Öl	Inlet flange Bride aspi Einlass	Exhaust flange Bride refoul Auslass	Mains socket type Prise alim Leistungsstecker	On Off switch
970100V	NEO D 16	A	std	Y	LVO 700	25 KF	25 KF	C14	Y
970101V	NEO D 16	C	std	Y	LVO 700	25 KF	25 KF	C14	Y
970102V	NEO D 16	D	std	Y	LVO 700	25 KF	25 KF	-	-
970103V	NEO D 16	B	std	Y	LVO 700	25 KF	25 KF	-	-
970200V	NEO D 25	A	std	Y	LVO 700	25 KF	25 KF	C14	Y
970201V	NEO D 25	C	std	Y	LVO 700	25 KF	25 KF	C14	Y
970202V	NEO D 25	D	std	Y	LVO 700	25 KF	25 KF	-	-
970300V	NEO D 40	A	std	Y	LVO 700	40 KF	40 KF	C20	Y
970301V	NEO D 40	C	std	Y	LVO 700	40 KF	40 KF	C20	Y
970302V	NEO D 40	D	std	Y	LVO 700	40 KF	40 KF	-	-
970401V	NEO D 65	C	std	Y	LVO 700	40 KF	40 KF	C20	Y
970402V	NEO D 65	D	std	Y	LVO 700	40 KF	40 KF	-	-

Motors :

A = single phase wide range 200 ... 240 V +- 10 % 50 & 60 Hz

B = single phase low voltage 115 V +- 10 % 60 Hz

C = single phase with Frequency drive 200 ... 240 V +- 10 % 50 & 60 Hz

D = Three phase wide range 180...264 / 342...457 V, 50 Hz & 180...264 / 342...506 V, 60 Hz

E = Three phase EU 230 / 400 V; 50 Hz & 460 V; 60 Hz

Gas ballast

std = 3 positions (OFF/1/2)

P = permanent

EM = electromagnetic

N = no gas ballast

Oil filter


Y = Yes

N = No

Ordering information

1.4 Accessories

Description	Part-Nr.
1 Oil level switch	9700LS
2 Exhaust filter pressure switch	971471210
3 Exhaust filter pressure manometer	95193
4 Temperature switch	9700TS
5 PT100 on 40 & 65 sizes only	971444320

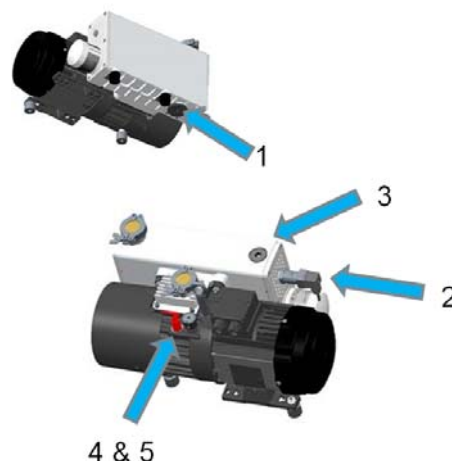

Power cords

For single phase pump versions

P/N / Ref / Kat-Nr	Plug pump side Prise côté pompe Buchse Pumpenseite	Plug supply side Prise côté alim Stecker Versorgungsseite	Length m Longeur m Länge m
140304	C19	NEMA 5-15P 125 V	1.8
140305	C19	NEMA 6-15P 250 V	1.8
140306	C19	Euro / Schuko 16 A	1.8
140307	C19	UK plug 13 A	1.8
E6500825	C19	C20	2.5
E6505883	C19	IEC 309 16 A	5
EK6502798	C19	C14	2.5
971443450	C13	Euro / Schuko 16 A	2
EK6508756	C13	NEMA 6-15P 250 V	2
9714434GB	C13	UK plug 13 A	2
9714434CH	C13	CH plug 10 A	2
9714434WW	C13	w/o	2
E6500255	C13	C14	2.5
EK6701862	C13	C20	0.2

SV Neo D 16 & 25 need C13 cables

SV Neo D 40 & 65 need C19 cables

The power cords are not included in the pump scope of delivery. We include a C14 resp. C20 plug.

Ordering information

1.5 Spare parts

Description	Neo D 16	Neo D 25	Neo D 40	Neo D 65
Set of gaskets	EK9701SK	EK9702SK	EK9703SK	EK9704SK
Exhaust filter	EK6702228	EK6702158	EK6702490	EK6702425
Oil filter	EK96004	EK96004	EK96004	EK96004
Oil filter bypass	71230570	71230570	71230570	71230570
Maintenance kit	EK9701M	EK9702M	EK9703M	EK9704M
Repair kit	EK9701RES	EK9702RES	EK9703RES	EK9704RES
Generator kit	EK9701GEN	EK9702GEN	EK9703GEN	EK9704GEN

1.6 Lubricants

Only original Leybold oil are to be used in the pumps, at least during their warranty period.

Warning

Following oil types can be used depending of the pump P/N, see § 1.3 Ordering Information

- Mineral oil LVO120
- PFPE LVO420
- Long life oil LVO700




Oil volume oil can	Mineral oil LVO120	PFPE LVO420	Long life oil LVO700
	Part-Nr.	Part-Nr.	Part-Nr.
1 l	L12001	L42001	L70001
5 l	L12005		

Transport and Storing

2 Transport and Storing

2.1 Transport and packaging


SOGEVAC® vacuum pumps pass a rigorous operating test in our factory and are packaged to avoid transport damages.
Please check packaging on delivery for transport damages. Outer packaging is made by a wood pallet & cardboard top

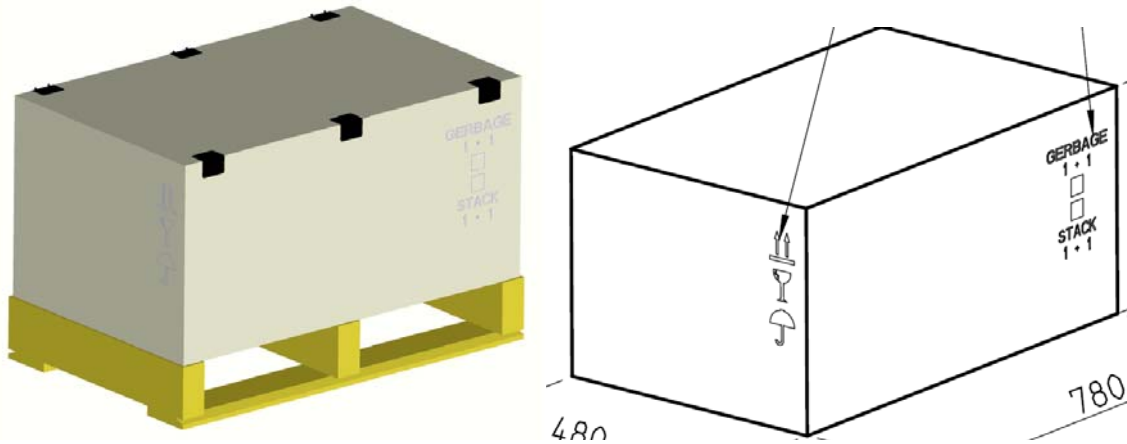

Pallets are to be handled with a forklift.

For unpacking,


- 1) Cut the 3 plastic straps carefully. Wear gloves & protection glasses !
- 2) Remove the cardboard top and inner reinforcement cardboard belt.

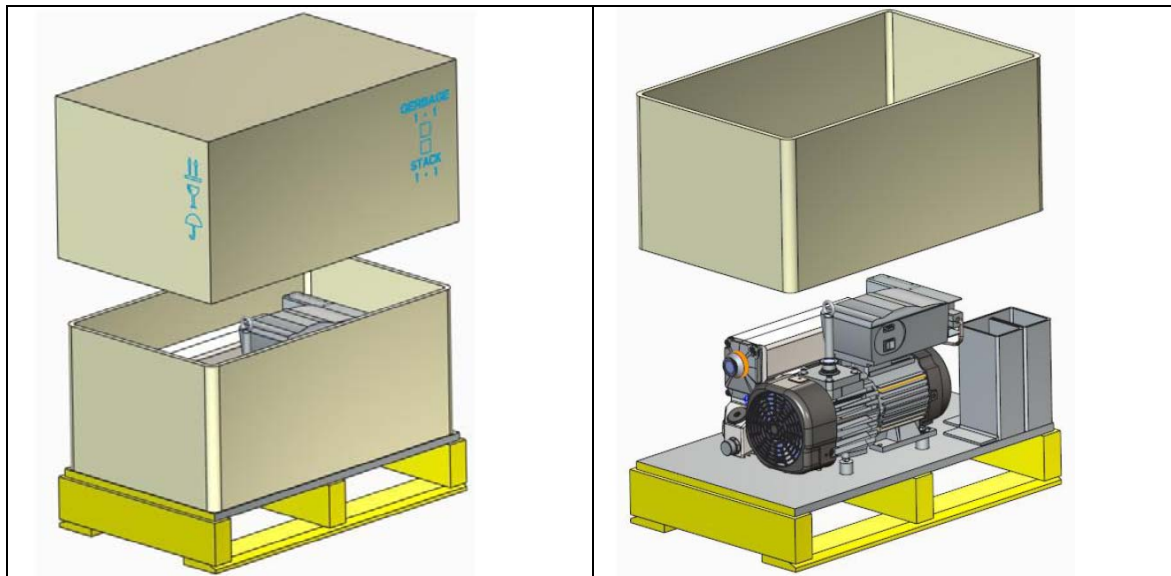

Transport and Storing

Pump fixation

The pumps are bolted by screws. Screws are to be removed from under the pallet using a 13 mm wrench.

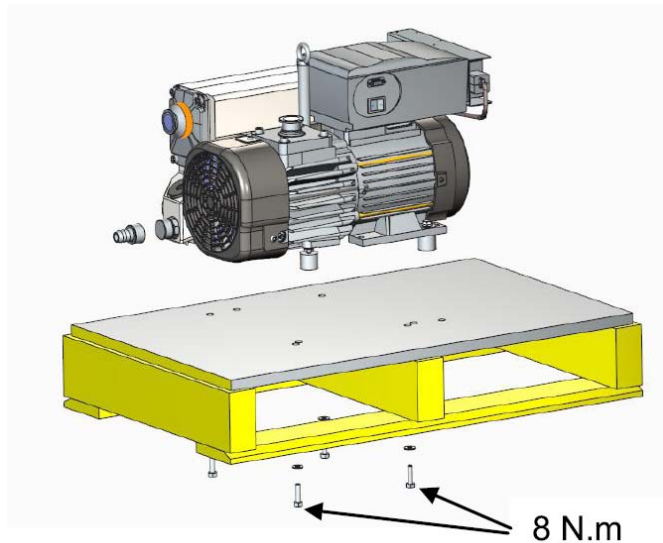

Pump lifting

The pump is then ready to be shifted or lifted off the pallet.



Due to the pump weight ONLY a suitable lifting device shall be used to lift the pump at the lifting lug (CE regulations) A lifting device is the only officially recommended way of handling the pump.

Do not lift at the motor, frequency converter, cables connection boxes, flanges etc ! Do not drag the pump from these points

Packing materials should be disposed of according to environmental laws or re-cycled. These operating instructions are part of the consignment. The connection ports are blanked off by plastic or metallic protective caps.

Take these caps away before turning on the pump. A sticker showing the steps is delivered with every pump. Please follow these instructions.

The pumps have the oil filled in.

Transport and Storing

2.2 Mounting orientation

See required space on drawings in paragraph 1.2.

Caution

Pumps which have been filled with oil must only be moved in the upright position (horizontally). Otherwise oil may escape. The angle of slope may not be over 10° max. Avoid any other orientations while moving the pump. Check the pump for the presence of any oil leaks, because there is the danger that someone may slip on the oil which has leaked from the pump. Only use the lifting lugs which are provided on the pump to lift the pump with the specified lifting devices.

Make sure that these have been installed safety. Use suitable lifting equipment. Make sure that all safety regulations are observed. Use only lifting devices appropriated to the pump weight. Check name plate. Do not use other pump elements than the lifting lugs as handles.

2.3 Storage

Before stocking the pump for a long time put it back in its original condition (blank off inlet and exhaust ports with the shipping seals, drain the oil) and store the pump in a dry place at room temperature.

Caution

Storage temperature: - 15°C to + 50°C

Until the pump is put back in to service again, the pump should be stored in a dry place, preferably at room temperature (20 °C - 168 °F). Before taking the pump out of service, it should be properly disconnected from the vacuum system, purged with dry nitrogen and the oil should be exchange too. The inlet and exhaust ports of the pump must be blanked off using the shipping seals which are included upon delivery of the pump.

The gas ballast must be closed and if the pump is to be shelved for a longer period of time is should be sealed in a plastic bag together with a desiccant (Silicagel).

If the pump has been shelved for over one year, standard maintenance must be done and the oil must be exchanged too before the pump is put in to service once more.

We recommend that you contact the service from Leybold.

Installation

3 Installation

It is essential to observe the following instructions step by step to ensure safe start-up.

Before installing the pump you must reliably disconnect it from the electrical power supply and prevent the pump from running up inadvertently.

Observe all safety regulations.

Do not stand on the pump and do not place objects on the pump as these can cause deformation of the fan housing and possible frictional rubbing.

Warning



3.1 Installation

The SOGEVAC® can be set up on any flat, horizontal surface. Under the four feet, there are metric threaded holes (see § 1.2 Connection) for securing the pump.

The oil level cannot be read properly if the pump is tilted and lubrication may be affected. The max. slope angle is $\pm 1^\circ$.

The pump's ambient temperature must be between 12°C (55°F) and 40°C (104°F). Additional warning note : consider changes in ambient temperatures that might occur when air conditioning is turned down, such as nights and weekends.

Warning



The following ambient operating environment must be observed:

- Pollution degree 2
- Ambient pressure = Atmospheric pressure.
- Rel. humidity $\leq 95\%$ without condensation

Normal presence of transient over-voltages due to the power mains.

NOTE : the usual transient over-voltage level corresponds to the category II of the impulse withstand (over-voltage) of the IEC 60364-4-443.

To ensure adequate cooling of the pump, leave enough space at the air intake and exhaust points, and for access and maintenance (see Fig. 1.1 to 1.4). Make sure to keep the fans, hoods, cooling coils & air intake of the motor clean. The pump must be kept clean (no dust deposit). The pump is to be installed such that the oil level sight-glass can be both easily read and so that it will not be broken.

3.2 Connection to the system

Intake Side

Caution

- Pump should be connected to inlet line without any tension. Use flex lines or pipe unions in your inlet and exhaust lines so that they can be easily removed for pump maintenance.
- The maximum pressure at the inlet may not exceed atmospheric pressure (about 1013 mbar). Never operate the pump in the presence of over pressures at its intake.
- Type of materials used for mounting of pipings should take care of pumped gases regulations. It is the same for its tightness. Using suitable connecting elements the pump can be connected to the vacuum system.

The cross-section of the intake line should be at least the same as the one for the intake port. If the intake line is too narrow, it reduces the pumping speed. If the process gas contains dust, it is absolutely essential to install a dust filter in addition to the dirt trap supplied.

We recommend installing the dust filter horizontally. This ensures that when removing the filter no particles fall into the intake port.

When pumping vapors, we recommend installing condensate traps on the intake and exhaust sides.

The intake must be installed in such a way to avoid condensates flowing into the pump.

Exhaust Side

Caution

The SOGEVAC® pumps have integrated exhaust filters which, even at a high gas throughput, trap the oil mist and guarantee exhaust gas free of oil mist. If the exhaust filters are clogged, the by pass opens at 1.5 bar, (absolute pressure), and the filters are bypassed. As a result, the proportion of oil in the exhaust gas as well as the pump's oil consumption will rise. Installing new exhaust filters will correct this problem. (See § 5.4).

Check in the individual case whether a line is necessary and/or prescribed. Volatile substances will pass through the filter. Depending on the process gas, we recommend connecting an exhaust line; this is always necessary when the exhaust gases are dangerous.

The maximum exhaust pressure must neither exceed 1.15 bar absolute (0.15 bar relative), nor fall under atmosphere pressure minus 15 mbar. Pump exhaust to be connected if oil mist or process gases are to be avoided in the pump area. Corresponding pressure regulating devices to be installed by the user.

The cross-section of the exhaust line should be at least the same as the pump's exhaust port. If the exhaust line is too narrow, overpressure or overheating may occur in the pump.

Before installing the exhaust line, remove the exhaust-flange plate and ensure that the exhaust demister(s) are secured tightly in place. They sometimes loosen during shipping and installation. A loose demister results in exhaust smoke during start-up and operation. Install the exhaust line with a downward slope to prevent condensate from flowing back into the pump. If this is not possible, we strongly recommend installing a condensate trap.

Warning



Never operate the pump with a blocked or restricted exhaust line. Before start-up, ensure that any blinds or similar shut-off devices in the exhaust line on the pressure side are opened and that the exhaust line is not obstructed. Exhaust pipe material must be resistant to pumped gases.

Installation

3.3 Electrical connections

Ensure that incoming power to the pump is off before wiring the motor or altering the wiring. The specific wiring and instructions for installation given in the manual for the electric motor must be followed.

The pump shall be adequately earthed to prevent the accumulation of static electricity. The electrical junction box should only be opened and electrical connections made when no explosive atmosphere is present.

Warning



3 phase motors


For connecting the motor, follow the schematics provided on the motor name plate or in its junction box, given your local mains voltage & frequency.

Electrical connection work must only be carried out by a qualified electrician in accordance with the applicable safety rules, see IEC 60204-1 & 61010-1. Connect the pump's motor to the right supply voltage via the connections in the junction box. The relevant safety rules require the use of a suitable motor protection switch. Set the switch in accordance with the rating on the motor nameplate.

If any security switch or electrical defect cuts out the pump, re-start-up of the pump has to be possible only manually.

The pump is designed for direct starting even under load conditions, i.e. the pump can be switched on against vacuum in the intake port.

After connecting the motor and after every time you alter the wiring, check the direction of rotation. Refer to the arrow marked on the generator fan cover center and on the motor cover:

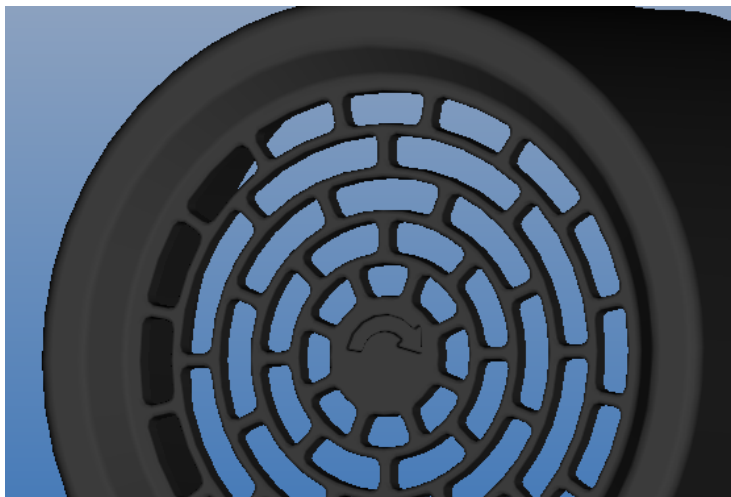

During the check, the intake port should be open. If the direction of rotation is wrong, oil may be ejected out the intake port. (The vacuum system may be pressurized).

For the check, switch on the motor briefly. If it starts up with the wrong direction of rotation, switch it off immediately and interchange two phases of the connection. It is recommendable to check the direction of rotation with a phase sequence indicator.

Prolonged running of the motor in the wrong direction of rotation will damage the pump !

1 phase motors

Should the pump be connected to a standard wall socket, it must be checked that a building protection rated 16 A is installed (fuse or breaker) to protect the power cable. Even if the pump is not operating, live voltage is present in the connection box ! Voltage and frequency mentioned on the pump nameplate must agree with the supply voltage. The control cable must be at least distant by 10 cm to the mains cable and crossings shall be at 90°. The power socket and cord are disconnection elements which must remain accessible to the users.


The motor integrates a motor over-load protection device (red knob on motor connection box) to be manually reset after an overload trip.



Frequency converter

Should the pump be connected to a standard wall socket, it must be checked that a building protection rated 16 A is installed (fuse or breaker) to protect the power cable. The frequency converter itself is self-protecting. Voltage and frequency mentioned on the pump nameplate must agree with the supply voltage. Even if the pump is not operating, live voltage is present in the frequency converter ! The control cable must be at least distant by 10 cm to the mains cable and crossings shall be at 90°. The power socket and cord are disconnection elements which must remain accessible to the users.

The pump is protected against over-currents by two 5X20 mm internal fuses rated 250 V, 12.5 A Time lag T. The fuse is mounted in a separate housing and can be exchanged from outside using a screwdriver to open the fuse holder cap. See drawing below.

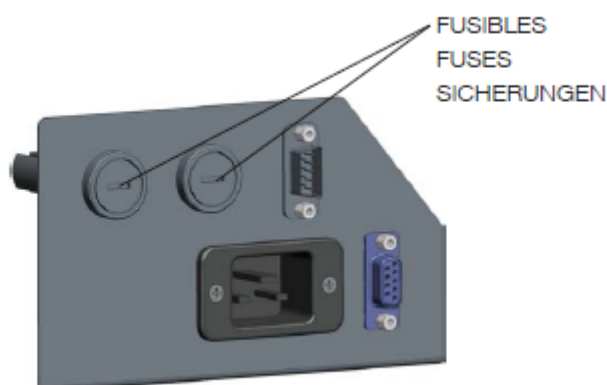

Exchange fuse only with electrically unplugged pump.

Temperature Switch (on given variants only)

A temperature switch can be retrofitted on the pumps and is available as an accessory.

It is a dry contact normally closed, tripping at 100 °C.

Hysteresis approx... 20 °C

The thermal switch can be connected in series with the motor protection relay.

Switching ratings DC 3A/60V Max

AC 5A/25V Max

Make sure the pump restart will be possible only by a voluntary action after having solved the overheating cause.

Temperature Sensor PT100 (on given variants only)

A temperature sensor type PT100 can be placed on the vacuum generator close to the exhaust valves. The temperature sensor monitors the pump temperature. See next page for threshold values.

Make sure the pump restart will be possible only by a voluntary action after having solved the overheating cause.

Oil level Switch (on given variants only)

An oil level switch can be retrofitted on the pumps and is available as an accessory.

The pump must be switched off and the pump and oil level checked immediately if the oil level is too low.

To avoid false alarms it is recommended to use a timer of 20 seconds on the switch output. If the default remains longer than 20 seconds, the pump must be switched off.

Switching ratings DC 1A/60V Max
AC 0,5A/25V Max

Exhaust filter over pressure switch (on given variants only)

An overpressure switch can be retrofitted on the pumps and is available as an accessory. The pump must be switched off and the pump, exhaust line and exhaust filters checked or changed immediately if the pressure in the oil casing is too high.

To avoid false alarms (e.g. at cold pump start) it is recommended using a timer set to 20 seconds on the switch output.

The exhaust filter switch warns when the increase in pressure drop over a filter caused by gradual clogging becomes too high, by means of an electrical alarm indication.

Attention: this only works at high inlet pressure (ideally atmospheric pressure at the inlet)!

Switching ratings DC 1A/60V Max
AC 0,5A/25V Max

See next page for threshold values.

Installation

3.4 Start-up

Control Parameters for the Ignition Prevention System (ATEX variants)

Caution

	Temperature switch	Temperature Sensor PT100	Oil Casing Pressure Switch	Oil Level Switch
Alarm Value	N/A	90 °C	N/A	N/A
Pump Stop Value and Timer	100 °C At switching Immediately	100 °C Immediately	At switching After 20 s	At switching After 20 s

The oil for the first filling is supplied with the pump. Before switching on, always make sure that the pump contains enough oil. The normal oil level in a still standing pump is in the upper half of the sight glass. If oil has to be added, unscrew the oil-fill plug, add oil and screw the plug firmly back in. The SOGEVAC® is designed for normal start-up at temperatures over 12°C (54°F) (as per PNEUROP).

Caution

Before starting the pump ensure that the attached accessories meet the requirements of your application and that safe operation is ensured. Never expose part of the body to the vacuum. Do not lay the hand on the intake to check suction. Exposure of a part of the body to the vacuum result in a rush of blood in the exposed part.

There is a danger of injury. Never operate the pump with an open and thus accessible inlet.

Vacuum connections as well as oil filling and oil draining openings must not be opened during operation of the pump.

The safety regulations which apply to the specific application in each case must be observed. This applies in particular to installation, operation and maintenance (servicing) as well as waste disposal and transportation.

Warning



Operation

4 Operation

4.1 Operation

To avoid overloading the motor, do not start the pump more than six times within one hour. If frequent starts are needed, the pump shall run continuously and be linked to the vacuum vessel by means of a valve. In that case, regulation will be made by the valve and not by start/stop of the pump. With the valve closed, the pump consumes little energy.

The SOGEVAC® can pump gases and vapors, provided that the gas ballast valve is installed and open and the pump has reached its operating temperature.

Warning



Pump in function is hot and some surfaces could reach a temperature higher than 80°C (176°F). There is a risk of burn by touching. Take note of warning labels on the pump.

Wear ear protection in case of operation at high inlet pressure !

Pumping of non-condensable gases

If the pump system contains mainly non condensable gases, the pump should be operated without gas ballast.

If the composition of the gases to be pumped is not known and if condensation in the pump cannot be ruled out, run the pump with gas ballast valve open in accordance with section below.

Pumping of condensable gases and vapors


With the gas ballast valve open and at operating temperature, the SOGEVAC® can pump pure water vapor up to the values indicated in the Technical Data.

The gas ballast valve is operated manually by turning the rubber knob on the gas ballast head. There are 3 positions:

O closed

I small flow for small vapor quantities and

II standard flow for standard vapor quantities

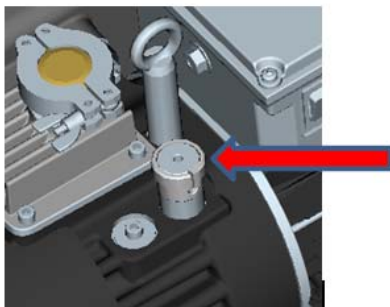

The running noise of the pump is slightly louder if the gas ballast valve is open. Before pumping vapors ensure that the pump has warmed up for approx. 30 min. with closed intake line and with open gas ballast valve.

Don't open the pump to condensable vapors until it has warmed to operating temperature: pumping process gas with a cold pump results in vapors condensing in the oil.

Caution

For processes with a high proportion of condensable vapors, the intake line should be opened only slowly after reaching the operating temperature. One sign of condensation of vapors in the pump is a rise of the oil level during operation of the pump.

Operation

When vapors are pumped, the pump must not be switched off immediately after completion of the process because the condensate dissolved in the pump oil may cause changes or corrosion. To prevent this, the pump must continue to operate with open gas ballast valve and closed intake port until the oil is free of condensate. We recommend operating the pump in this mode for at least 30 min. after completion of the process.

In cycle operation, the pump should not be switched off between the cycles but should continue to run with gas ballast valve open and intake port closed (if possible via a valve). Power consumption is minimal when the pump is operating at ultimate pressure.

Once all vapors have been pumped off from a process (e. g. during drying), the gas ballast valve can be closed in order to improve the ultimate pressure.

Caution

The SOGEVAC® Neo D can be equipped with different types of gas ballasts, as defined by their cat-nr.

The GB flow is valid for a pump operating at ultimate pressure (inlet closed) and for a GB gas supply of 1 bar abs. GB gas supply pressure max. 1 bar abs.

Warning



In normal operation, the Sogevac® Neo D pumps operated typically below 10 mbar inlet pressure or at ultimate pressure with open gas ballast (for pumps having a gas ballast). Continuous duty and cycling operation are of course possible.

In the below listed abnormal conditions (but not limited to) the pump may stop due to overheating of the power electronics or motor.

- Continuous operation at high inlet pressure
- Restricted, clogged or blocked exhaust filters or exhaust line
- Out of tolerance supply voltage
- Unsuitable, polluted or too old oil
- Too low oil level
- Too high ambient temperature
- Clogged fan hoods or impeded fresh air circulation
- Etc.

The pump has been designed & tested to work in an normal EMC environment in acc. to IEC 61326-1 Table 1

Operation

4.2 Shutdown

Under normal circumstances, all that you need do is to switch off the pump. The intake port of the SOGEVAC® contains an anti-suck back valve, which closes the intake port when the pump is shut down, to avoid the pump oil being sucked back into the vacuum chamber. The valve's functioning is not impaired by gas ballasting. The anti-suck back valve is not a safety vacuum valve. When pumping condensable media, let the pump continue to operate with the gas ballast valve open and the intake line closed before switching off.

Warning



If the pump is to be shut down for an extended period or if the pump has to be stored, proceed as follows: When pumping harmful substances, take adequate safety precautions.

Drain the oil (see Section 5.4).

Pour in clean oil up to the bottom edge of the oil-level glass (see Section 5.4) and let the pump run for a few minutes.

Then drain the oil and pour in clean oil up to the top edge of the oil-level glass (see Section 5.4).

Seal the connection ports. Special preservation or flushing oils are not necessary.

Warning



When the pump has been switched off due to over-heating, initiated by the motor or its protection, the pump must be cooled down to the ambient temperature and must only be switched on again manually after having eliminated the cause.

In order to prevent the pump from running up unexpectedly after a mains power failure, the pump must be integrated into the control system in such a way that the pump can only be started by a manually operated switch. This applies equally to emergency cut-off switches.

In case of switching processes in connection with a pump which has warmed up under operating conditions, the pump must then not be directly switched on again.

4.3 Ultimate pump pressure

If the system cannot produce the pressures specified in the technical data, measure the ultimate pressure directly at the pump's intake port after disconnecting the pump from the system. The ultimate pressure of non-condensable gases (partial pressure of air) can only be measured with a compression vacuum gauge or a partial pressure gauge. Precise measurements can only be obtained with calibrated instruments.

Upon initial start-up, after prolonged idle periods or after an oil change, it takes a while until the pump reaches the specified ultimate pressure. The pump has to attain its operating temperature, and the pump oil has to be degassed. We recommend operating the pump initially with the gas ballast valve open.

The ultimate pressure depends on the pump temperature and the pump oil used. The best ultimate pressures can be obtained at a low pump temperature and by using the recommended oil types.

4.4 Taking out of use

Please contact Leybold for all relation question about the disposal of spares, consumables or the entire pump

5 Maintenance

5.1 Safety Information

Observe all safety regulations.

All work must be done by suitably trained personnel. Maintenance or repairs carried out incorrectly will affect the life and performance of the pump, may change its CE compliance or ATEX ratings and may cause problems when filing warranty claims or free Leybold from any responsibility. Before any maintenance operations are carried out on the pump it should be ensured that the pump and its surroundings are free from flammable atmospheres and dust deposits.

Where dust can be deposited on the pump or motor surfaces, provision should be made to ensure that these are removed regularly. The pump must remain clean & dust-free. **The cleaning must be done with cloths / products avoiding static charges.**

Never mount used seals; always mount new seals. Only the use of genuine Leybold parts is allowed ! Any integration of non Leybold parts or non-authorized repairs will cancel the pump CE or ATEX certification and will waive all Leybold responsibilities.

Disconnect the power before disassembling the pump. Make absolutely sure that the pump cannot be accidentally started.

If the pump has pumped harmful substances, ascertain the nature of the hazard and take adequate safety measures. Observe all safety regulations. The equipment must be maintained in such a way that the safety of the system is not impaired in any way.

The system instruction manual details the routine maintenance tasks that are necessary to maintain CE & ATEX compliance. Where the customer wishes to conduct more complex maintenance / overhaul tasks it is necessary for them to be trained by Leybold and supplied with the correct maintenance / inspection tooling.

In addition to the maintenance operations given in the manual, a complete overhaul of the pump including the replacement of the motor bearings should be carried out every 20'000 h of operation or every 3 years whichever is the sooner.

Warning



Maintenance

5.2 Maintenance Intervals

The intervals stated in the maintenance schedule are approximate values for normal pump operation. Unfavorable ambient conditions and/or aggressive media may significantly reduce the maintenance intervals.

Warning



Maintenance job	Frequency	Section
Checking the oil level	Daily.	5.4.A
Checking the oil condition	Depends of process, at least weekly.	5.4.B
First oil change	After 150 hours of operation.	5.4.C
Following oil changes	Depends of process. Clean processes and LVO700 oil allow up to 3 years	5.4.C
Changing the exhaust and oil filters	If oil mist at exhaust or at indication of exhaust filter pressure sensor. At least annually. Clean processes and LVO700 oil allow up to 3 years	5.4.D
Checking the float valve	At each exhaust filter change or at least yearly.	5.4.E
Cleaning the intake port dirt trap	Depends of process, at least monthly.	5.4.F
Checking the anti suck back valve	Depends of process, at least yearly.	5.4.F
Replacing the Pump Module	In case of specific pump servicing.	5.4.H
Replacement of electrical motor	In case of specific pump servicing.	5.4.I

To simplify the maintenance work we recommend combining several jobs.

5.3 Service at Leybold facilities

If you send a pump to us, indicate whether the pump is free of substances damaging to health or whether it is contaminated. If it is contaminated also indicate the nature of hazard. For this you must use the form we have prepared and which will be provided upon request.

A copy of this form, "Declaration of Contamination of Vacuum Instruments and Components" is reproduced at the end of the Operating Instructions.

Another suitable form is available from
<https://www.leybold.com/en/downloads/download-documents/declaration-of-contamination/>

Please attach this form to the pump, or enclose it with it. This statement detailing the type of contamination is required to satisfy legal requirements and for the protection of our employees.

We will return any pump received without a "Declaration of Contamination" to the sender's address.

The pump must be packaged in such a way that it will not be damaged during shipping, and so that no harmful substances can escape from the package. If you open a pump at your own works also observe a potential contamination.

When disposing of used oil, please observe the relevant environmental regulations. Due to the design concept, SOGEVAC® pumps require very little maintenance under normal operating conditions. The work required is described in the sections below.

All work must be done by suitably trained personnel. Maintenance or repairs carried out incorrectly will affect the life and performance of the pump and may cause problems when filing warranty claims.

In connection with this, you may be interested in the Leybold practical seminars, in which maintenance, repair and testing information for the Sogevac® pumps is conveyed by qualified trainers.

Warning




Warning



5.4 Maintenance Work

5.4.A Checking the oil level

The pump's oil level during operation must always be between the middle and top edge of the oil-level glass. When necessary, switch off the pump and add the correct quantity of oil.

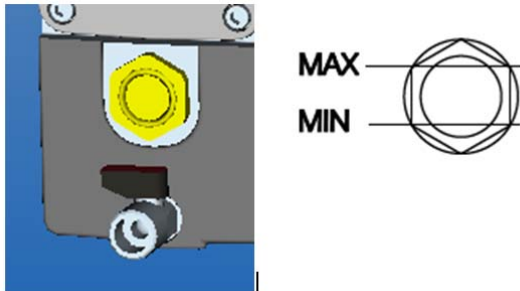

Overfilling leads to oil losses at high intake pressures

High oil consumption often indicates that exhaust filters are clogged (See 5.4.D).

The oil level should be checked at least once a day. Stop the pump for filling oil.

5.4.B Checking the oil condition

Normally the oil is clear and transparent. If the oil darkens, it is an indication that the oil must be checked.

Warning

The oil must be changed if:

- Its viscosity increases by 20 % compared to new oil.
- Its Total Acid Index exceeds given limits, depending of oil type. Please consult us.



If gases or liquids dissolved in the oil result in deterioration of the ultimate pressure, the oil can be degassed by letting the pump running for about 30 min. with the intake port closed and the gas ballast valve open.

The amount of oil required for an oil check should be drained via the oil-drain plug into a beaker or similar container with the pump switched off but still at operating temperature.

Bad oil quality can cause a pump temperature increase, which can influence the pump ATEX temperature rating!

Depending on the process involved, dangerous substances may escape from the pump and oil. Take the appropriate precautions.

Observe the safety regulations.

Check to be carried out, depending of process, at least weekly.

5.4.C Oil change

Always change the oil when the pump is switched off but still at working temperature.

If there is a risk of the oil being polymerized by the connected process, change the oil immediately after operation of the pump.

Pump in function is hot and some surfaces could reach a temperature higher than 80 °C (176 °F).

There is a risk of burn by touching.




Open the oil-drain valve and let the used oil drain into a suitable container. Depending on the process involved, dangerous substances may escape from the pump and oil. Take the appropriate precautions.

Observe the safety regulations.

When disposing of used oil please observe the relevant environmental regulations!

When the flow of oil slows down close the oil-drain valve, briefly switch on the pump (max. 10s) and switch it off. Drain the remaining oil.

Unscrew the oil-fill plug and fill the pump. In case of severe pollution, it should be flushed by filling it with fresh oil up to the bottom edge of the oil-level glass, run it for a short time and then change the oil again.

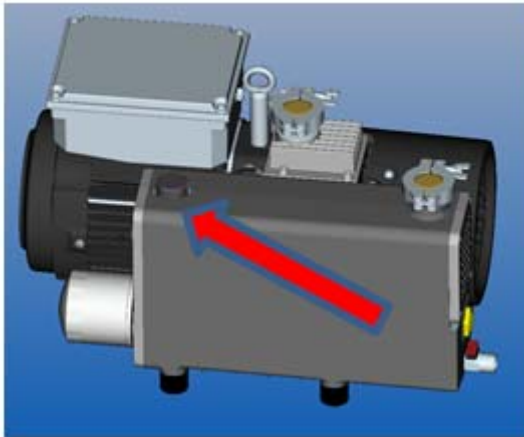

Use suitable oil only (see Section 1.9).

Depending on the process involved, dangerous substances may escape from the pump and oil. Take the appropriate precautions.

Never mount used seals; always mount new seals.

When disposing of used oil please observe the relevant environmental regulations!

Warning



Warning



5.4.D Replacing the Exhaust Filters


Tools required :

- Allen key 6 mm.
- Box wrench 10 mm.
- oil filter key (710 73 532)


Warning



- Remove the 4 screws of the exhaust filter cover plate

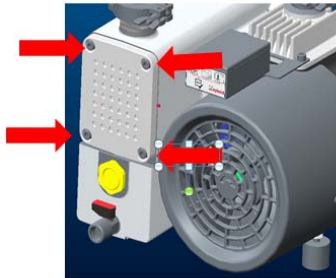


- Pull out the exhaust filter

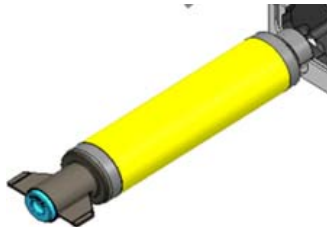

- Verify on the new exhaust filter that the O-Ring is present
- Mount the new exhaust filter.
- Tighten the 4 screws of the exhaust filter cover plate with 9.5 Nm.

Respect the indications on the oil filter for changing the latter.

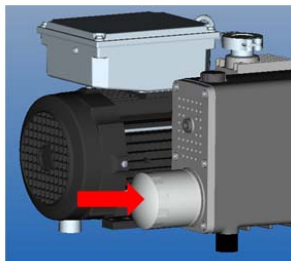

Depending on the process involved, dangerous substances may escape from the pump and oil. Take the appropriate precautions.

Observe the safety regulations.

Important

When disposing of used filters please observe the relevant environmental regulations!

Never mount used seals; always mount new seals.

5.4.E Checking the float valve

Tools required : Allen Key 6 mm

If the pressure does not fall below approx. 5 mbar during pump operation, check the tightness of the float valve.

Remove the exhaust filter with the exhaust flange.

Remove the float valve screw and pull the float valve assembly out of the float chamber.

Take off the gasket.

Clean the nozzle. Check the tightness of the float valve.

Check all gaskets and replace them with new ones if necessary.

Reassemble the float valve in the reverse sequence.

Depending on the process involved, dangerous substances may escape from the pump and oil. Take the appropriate precautions.

Never mount used seals; always mount new seals.

Warning



Caution

5.4.F Cleaning the intake port dirt trap and Checking the anti suck back valve

Cleaning the intake port dirt trap

Tools required : open-jaw or box wrench 13 mm. Allen key 6 mm

A dirt trap for coarse particles is located in the intake flange of the pump. It shall be kept clean to avoid reduction of the pumping speed.

The dirt trap consists of a wire-mesh screen.

Disassemble the intake hose or pipe.

Take out the wire-mesh screen and clean them using a suitable solvent.

Reassemble in the reverse sequence.

Depending on the process involved, dangerous substances may escape from the pump and oil. Take the appropriate precautions.

Never mount used seals; always mount new seals.

Warning



Maintenance

Checking the Anti-Suck back Valve

Tools required :
- Allen key 6 mm

Keep the anti-suck back valve clean to ensure proper operation of the pump. In any application we strongly recommend installing an polyester dust filter upstream.

First disconnect the intake line.

Remove four screws and take off the intake flange and gasket.

Remove the anti-suck back valve and clean it.

Reassemble the intake port. We recommend replacing the gasket with a new one.

Depending on the process involved, dangerous substances may escape from the pump and oil. Take the appropriate precautions.

Observe the safety regulations.

Never mount used seals; always mount new seals.

Depends of process, but to be done at least yearly.

Warning



Caution

5.4.H Replacing the Pump Module

Please consult Leybold

5.4.I Replacement of electrical motor

Please consult Leybold for specific maintenance works to be carried e.g. bearing replacement.

The motor can only be exchange with an identical one for the same manufacturer and marking.

In case other motors are used, the pump loses its CE & ATEX certification.



Warning

Trouble shooting

6 Trouble shooting

Fault	Possible cause	Remedy
Pump does not start.	Pump is connected incorrectly. Motor protection switch incorrectly set. Operating voltage does not match motor. Motor is malfunctioning. Oil temperature is below 12°C (54°F). Oil is too viscous. Exhaust filter / exhaust line is clogged. Power transmission by V-belts is impaired. Pump is seized up	Connect the pump correctly. Set motor protection switch properly. Replace the motor. Replace the motor. Heat the pump and pump oil or use different oil. Use appropriate oil grade. Replace the filter or clean the exhaust line. Tighten or replace the V-belts. Repair the pump.
Pump does not reach ultimate pressure.	Measuring technique or gauge is unsuitable. External leak Float valve does not close. Anti-suckback valve is malfunctioning. Inadequate lubrication due to: ■ unsuitable or contaminated oil, ■ clogged oil filter, ■ clogged oil lines. Vacuum lines are dirty. Pump is too small.	Use correct measuring technique and gauge. Repair the pump. Repair the valve. Repair the valve. Change the oil (degas it, if necessary). Replace the oil filter. Clean the oil casing. Clean vacuum lines. Check the process date; replace the pump, if necessary.
Pumping speed is too low.	Dirt trap in the intake port is clogged. Exhaust filter is clogged. Connecting lines are too narrow or too long. Anti-suckback valve is hard to open.	Clean the dirt trap ; Precaution : install a dust filter in intake line. Install new filter elements. Use adequately wide and short connecting lines. Check spring free length.
After switching off pump under vacuum, pressure in system rises too fast.	System has a leak. Anti-suckback is malfunctioning.	Check the system. Repair the valve.
Pump gets too hot	Cooling air supply is obstructed. Cooler is dirty. Ambient temperature is too high. Process gas is too hot. Oil level is too low. Oil is unsuitable. Oil cycle is obstructed. Exhaust filter / exhaust line is obstructed. Pump module is no longer usable.	Set pump up correctly. Clean the cooler. Set pump up correctly. Change the process. Add oil to reach the correct oil level. Change the oil. Clean or repair the oil lines. Replace the exhaust filter, clean the exhaust line. Replace the pump module.

Trouble shooting

Fault	Possible cause	Remedy
Oil in intake line or in vacuum vessel.	Oil comes from the vacuum system. Anti-suckback valve is obstructed. Sealing surfaces of anti-suckback valve are damaged or dirty. Oil level is too high.	Check the vacuum system. Clean or repair the valve. Clean or repair the intake port and valve. Drain the excess oil.
Pump's oil consumption too high, oil mist at exhaust.	Exhaust filters are clogged or damaged. Nozzle of float valve is clogged. Oil level is too high.	Replace the filters. Check the valve, clean the nozzle. Drain the excess oil.
Oil is turbid.	Condensation.	Degas the oil or change the oil and clean the pump. Precaution : open the gas ballast valve or insert a condensate trap. Clean the gas ballast intake filter.
Pump is excessively noisy.	Oil level is very low (oil is no longer visible). Oil filter is clogged. Large vacuum leak in system. Power transmission by V-belts is impaired.	Add oil. Change the oil and filter. Repair vacuum leak. Tighten or replace the V-belts.

* Reference section: This column refers to the section in the Operating Instructions that contains the applicable repair information.

Spare parts

7 Spare parts

To guarantee safe operation of the Leybold pump, only original & genuine spare parts and accessories shall be used. When ordering spare parts and accessories, always state pump type and serial number. You can find part numbers in the spare parts list.

The pump loses its CE & ATEX certification if non genuine Leybold parts are used.

Consumables and main spare parts kits for SOGEVAC® pumps are usually available on stock at Leybold service centers. The list of these parts is given here after and in the spare parts table where the contents of each kits is detailed.

- Exhaust demisters
- Oils (Special oils please refer to the specific notice of the pump or contact Leybold).
- Maintenance kit
- Repair kit

We recommend using these kits which have been defined to allow an optimal maintenance or repair. Individual spare parts may need longer delivery time.

Warning



Spare parts

CE Declaration



EU Declaration of Conformity

(Translation of original Declaration of Conformity)

The manufacturer: Leybold France SAS
640 rue Aristide Bergès
26501 Bourg Les Valence
France

herewith declares that the products specified and listed below which we have placed on the market, comply with the applicable EU Council Directives. This declaration becomes invalid if modifications are made to the product without agreement of Leybold.

Product designation: SOGEVAC NEO
Type designation: D 16, D 25
part number: 970100V / 970110V / 970101V / 970111V / 970102V / 970112V
970200V / 970210V / 970201V / 970211V / 970202V / 970212V
and their variants

The products complies to the following European Council Directives:

Machinery Directive (2006/42/EC)

The safety objectives of the Low Voltage Directive 2014/35/EU were complied with in accordance with Appendix 1 No. 1.5.1 of Machinery Directive 2006/42/EC.

Electromagnetic Compatibility (2014/30/EU)

RoHS Directive (2011/65/EU) & (2015/863/EU)

The following harmonized standards have been applied:

EN 1012-2:1996+A1:2009	Compressors and vacuum pumps — Safety requirements — Part 2: Vacuum pumps
EN 60204-1:2006/A1:2009	Safety of machinery — Electrical equipment of machines — Part 1: General requirements requirements
EN 61000-6-2:2005/AC:2005	Electromagnetic compatibility (EMC) - Part 6-2: Generic standards - Immunity for industrial environments
EN 61000-6-4:2007/A1:2011	Electromagnetic compatibility (EMC) - Part 6-4: Generic standards - Emission standard for industrial environments

Documentation officer: Leybold France SAS, 640 rue Aristide Bergès,
26501 Bourg Les Valence, France

Cologne, January 17, 2018

Andries Desiron
VP Engineering
Industrial Vacuum Division

Cologne, January 17, 2018

Joseph Schott
General Manager Leybold Valence

Declaration of Contamination



Declaration of Contamination of Compressors, Vacuum Pumps and Components

The repair and / or servicing of compressors, vacuum pumps and components will be carried out only if a correctly completed declaration has been submitted. Non-completion will result in delay. The manufacturer can refuse to accept any equipment without a declaration.

A separate declaration has to be completed for each single component.

This declaration may be completed and signed only by authorized and qualified staff.

Customer/Dep./Institute: _____ Address: _____ _____ Person to contact: _____ Phone: _____ Fax: _____ End user: _____	Reason for return: ☒ applicable please mark Repair: ☐ chargeable ☐ warranty Exchange: ☐ chargeable ☐ warranty ☐ Exchange already arranged / received Return only: ☐ rent ☐ loan ☐ for credit Calibration: ☐ DKD ☐ Factory-calibr. ☐ Quality test certificate DIN 55350-18-4.2.1																																												
A. Description of the Leybold product: Material description: _____ Catalog number: _____ Serial number: _____ Type of oil (ForeVacuum-Pumps): _____ Failure description: _____ Additional parts: _____ Application-Tool: _____ Application- Process: _____																																													
B. Condition of the equipment <table style="width: 100%;"><thead><tr><th></th><th>No¹⁾</th><th>Yes</th><th>No</th></tr></thead><tbody><tr><td>1. Has the equipment been used</td><td>☐</td><td>☐</td><td>☐</td></tr><tr><td>2. Drained (Product/service fluid)</td><td>☐</td><td>☐</td><td>☐</td></tr><tr><td>3. All openings sealed airtight</td><td>☐</td><td>☐</td><td>☐</td></tr><tr><td>4. Purged</td><td>☐</td><td>☐</td><td>☐</td></tr></tbody></table> If yes, which cleaning agent _____ and which method of cleaning _____ ¹⁾ If answered with "No", go to D. ← Contamination: <table style="width: 100%;"><thead><tr><th></th><th>No¹⁾</th><th>Yes</th></tr></thead><tbody><tr><td>toxic</td><td>☐</td><td>☐</td></tr><tr><td>corrosive</td><td>☐</td><td>☐</td></tr><tr><td>flammable</td><td>☐</td><td>☐</td></tr><tr><td>explosive ²⁾</td><td>☐</td><td>☐</td></tr><tr><td>radioactive ²⁾</td><td>☐</td><td>☐</td></tr><tr><td>microbiological ²⁾</td><td>☐</td><td>☐</td></tr><tr><td>other harmful substances</td><td>☐</td><td>☐</td></tr></tbody></table> ↓			No ¹⁾	Yes	No	1. Has the equipment been used	☐	☐	☐	2. Drained (Product/service fluid)	☐	☐	☐	3. All openings sealed airtight	☐	☐	☐	4. Purged	☐	☐	☐		No ¹⁾	Yes	toxic	☐	☐	corrosive	☐	☐	flammable	☐	☐	explosive ²⁾	☐	☐	radioactive ²⁾	☐	☐	microbiological ²⁾	☐	☐	other harmful substances	☐	☐
	No ¹⁾	Yes	No																																										
1. Has the equipment been used	☐	☐	☐																																										
2. Drained (Product/service fluid)	☐	☐	☐																																										
3. All openings sealed airtight	☐	☐	☐																																										
4. Purged	☐	☐	☐																																										
	No ¹⁾	Yes																																											
toxic	☐	☐																																											
corrosive	☐	☐																																											
flammable	☐	☐																																											
explosive ²⁾	☐	☐																																											
radioactive ²⁾	☐	☐																																											
microbiological ²⁾	☐	☐																																											
other harmful substances	☐	☐																																											
C. Description of processed substances (Please fill in absolutely) 1. What substances have come into contact with the equipment ? Trade name and / or chemical term of service fluids and substances processed, properties of the substances According to safety data sheet (e.g. toxic, inflammable, corrosive, radioactive) <table border="1" style="width: 100%; border-collapse: collapse;"><thead><tr><th>X</th><th>Tradename:</th><th>Chemical name:</th></tr></thead><tbody><tr><td>a)</td><td>_____</td><td>_____</td></tr><tr><td>b)</td><td>_____</td><td>_____</td></tr><tr><td>c)</td><td>_____</td><td>_____</td></tr><tr><td>d)</td><td>_____</td><td>_____</td></tr></tbody></table> 2. Are these substances harmful ? No Yes 3. Dangerous decomposition products when heated ? No Yes If yes, which ? _____ ← ²⁾ Components contaminated by microbiological, explosive or radioactive products/substances will not be accepted without written evidence of decontamination.		X	Tradename:	Chemical name:	a)	_____	_____	b)	_____	_____	c)	_____	_____	d)	_____	_____																													
X	Tradename:	Chemical name:																																											
a)	_____	_____																																											
b)	_____	_____																																											
c)	_____	_____																																											
d)	_____	_____																																											

D. Legally binding declaration

I / we hereby declare that the information supplied on this form is accurate and sufficient to judge any contamination level.

↓ Name of authorized person (block letters): _____ _____ Date	_____ signature of authorized person	firm stamp
---	--	---

17200001_002_C2 © Leybold

Notes

Sales and Service

Germany

Leybold GmbH
Sales, Service, Support Center (3SC)
Bonner Strasse 498
D-50968 Cologne
T: +49-(0)221-347 1234
F: +49-(0)221-347 31234
sales@leybold.com
www.leybold.com

Leybold GmbH
Sales Area North
Branch Office Berlin
Industriestrasse 10b
D-12099 Berlin
T: +49-(0)30-435 609 0
F: +49-(0)30-435 609 10
sales.bn@leybold.com

Leybold GmbH
Sales Office South
Branch Office Munich
Karl-Hammerschmidt-Strasse 34
D-85609 Aschheim-Dornach
T: +49-(0)89-357 33 9-10
F: +49-(0)89-357 33 9-33
sales.mn@leybold.com
service.mn@leybold.com

Leybold Dresden GmbH
Service Competence Center
Zur Wetterwarte 50, Haus 304
D-01109 Dresden
Service:
T: +49-(0)351-88 55 00
F: +49-(0)351-88 55 041
info.dr@leybold.com

Europe

Belgium

Leybold Nederland B.V.
Belgisch bijkantoor
Leuvensesteenweg 542-9A
B-1930 Zaventem
Sales:
T: +32-2-711 00 83
F: +32-2-720 83 38
sales.zv@leybold.com
Service:
T: +32-2-711 00 82
F: +32-2-720 83 38
service.zv@leybold.com

France

Leybold France S.A.S.
Parc du Technopolis, Bâtiment Beta
3, Avenue du Canada
F-91940 Les Ulis cedex
Sales and Service:
T: +33-1-69 82 48 00
F: +33-1-69 07 57 38
info.ctb@leybold.com
sales.ctb@leybold.com

Leybold France S.A.S.
Valence Factory
640, Rue A. Bergès
B.P. 107
F-26501 Bourg-lès-Valence Cedex
T: +33-4-75 82 33 00
F: +33-4-75 82 92 69
marketing.vc@leybold.com

Great Britain

Leybold UK LTD.
Unit 9
Silverglade Business Park
Leatherhead Road
Chessington
Surrey (London)
KT9 2QL
Sales:
T: +44-13-7273 7300
F: +44-13-7273 7301
sales.ln@leybold.com
Service:
T: +44-13-7273 7320
F: +44-13-7273 7303
service.ln@leybold.com

Italy

Leybold Italia S.r.l.
Via Filippo Brunelleschi 2
I-20093 Cologno Monzese
Sales:
T: +39-02-27 22 31
F: +39-02-27 20 96 41
sales.mi@leybold.com
Service:
T: +39-02-27 22 31
F: +39-02-27 22 32 17
service.mi@leybold.com

Netherlands

Leybold Nederland B.V.
Floridadeef 102
NL-3565 AM Utrecht
Sales and Service:
T: +31-(30) 242 63 30
F: +31-(30) 242 63 31
sales.ut@leybold.com
service.ut@leybold.com

Switzerland

Leybold Schweiz AG
Hinterbergstrasse 56
CH-6312 Steinhausen
Warehouse and shipping address:
Riedhofstrasse 214
CH-8105 Regensdorf
Sales:
T: +41-44-308 40 50
F: +41-44-302 43 73
sales.zh@leybold.com
Service:
T: +41-44-308 40 62
F: +41-44-308 40 60
service.zh@leybold.com

Spain

Leybold Hispánica, S.A.
C/. Huelva, 7
E-08940 Cornellà de Llobregat
(Barcelona)
Sales:
T: +34-93-666 43 11
F: +34-93-666 43 70
sales.ba@leybold.com
Service:
T: +34-93-666 46 11
F: +34-93-685 43 70
service.ba@leybold.com

America

USA

Leybold USA Inc.
5700 Mellon Road
USA-Export, PA 15632
T: +1-724-327-6700
F: +1-724-325-3577
info.ex@leybold.com
Sales:
T: +1-724-327-6700
F: +1-724-333-1217
Service:
T: +1-724-327-6700
F: +1-724-325-3577

Brazil

Leybold do Brasil
Rod. Vice-Prefeito Hermenegildo Tonelli,
nº. 4413 - 6B
Distrito Industrial
Jundiaí - SP
CEP 13.213-086
Sales and Service:
T: +55 11 3395 3180
F: +55 11 99467 5934
sales.ju@leybold.com
service.ju@leybold.com

Asia

P. R. China

Leybold (Tianjin)
International Trade Co. Ltd.
Beichen Economic
Development Area (BEDA),
No. 8 Western Shuangchen Road
Tianjin 300400
China
Sales and Service:
T: +86-400 038 8989
F: +86-800 818 0033
F: +86-22-2697 4061
F: +86-22-2697 2017
sales.tj@leybold.com
service.tj@leybold.com

India

Leybold India Pvt Ltd.
T-97/2, MIDC Bhosari
Pune-411 026
India
Sales and Service:
T: +91-80-2783 9925
F: +91-80-2783 9926
sales.bg@leybold.com
service.bg@leybold.com

Japan

Leybold Japan Co., Ltd.
Headquarters
Shin-Yokohama A.K.Bldg., 4th floor
3-23-3, Shin-Yokohama
Kohoku-ku, Yokohama-shi
Kanagawa-ken 222-0033
Japan
Sales:
T: +81-45-471-3330
F: +81-45-471-3323
sales.yh@leybold.com

Leybold Japan Co., Ltd.
Tsukuba Technical Service Center
1959, Kami-yokoba
Tsukuba-shi, Ibaraki-shi 305-0854
Japan
Service:
T: +81-29 839 5480
F: +81-29 839 5485
service.iik@leybold.com

Malaysia

Leybold Malaysia
Leybold Singapore Pte Ltd.
No. 1 Jalan Hi-Tech 2/6
Kulim Hi-Tech Park
Kulim, Kedah Darul
Aman 09000
Malaysia
Sales and Service:
T: +604 4020 222
F: +604 4020 221
sales.ku@leybold.com
service.ku@leybold.com

South Korea

Leybold Korea Ltd.
3F, Jellzone 2 Tower
Jeongja-dong 159-4
Bundang-gu Sungnam-si
Gyeonggi-do
Bundang 463-384, Korea
Sales:
T: +82-31 785 1367
F: +82-31 785 1359
sales.bd@leybold.com
Service:
623-7, Ulsung-Dong
Cheonan-Si
Chungcheongnam-Do
Korea 330-290
T: +82-41 589 3035
F: +82-41 588 0166
service.cn@leybold.com

Singapore

Leybold Singapore Pte Ltd.
42 Loyang Drive
Loyang Industrial Estate
Singapore 508962
Singapore
Sales and Service:
T: +65-6303 7030
F: +65-6773 0039
sales.sg@leybold.com
service.sg@leybold.com

Taiwan

Leybold Taiwan Ltd.
10F., No. 32, Chenggong 12th St.,
Zhubei City, Hsinchu County 302
Taiwan, R.O.C.
Sales and Service:
T: +886-3-500 1688
F: +886-3-583 3999
sales.hc@leybold.com
service.hc@leybold.com